


FO-1470

FACSIMILE

SHARP®

MODEL
FO-1470

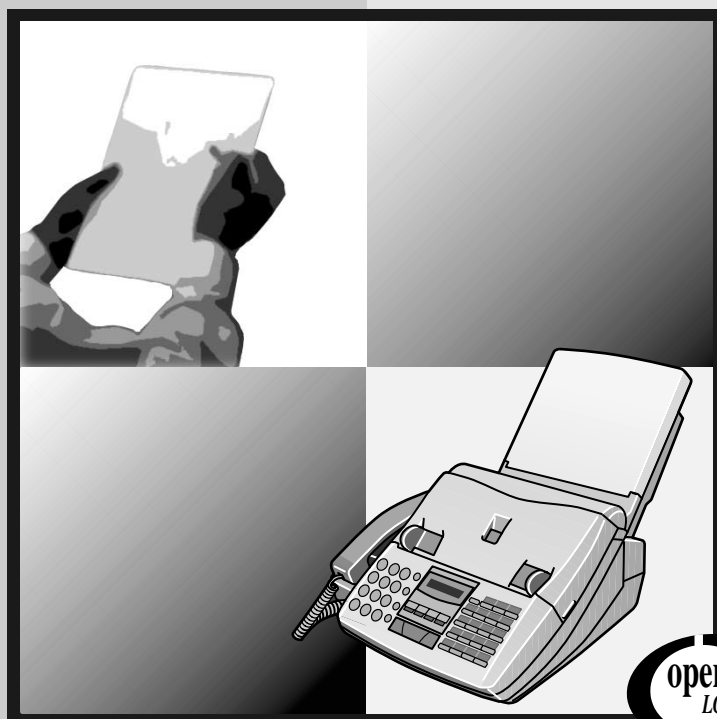

www.OpenLCR.com

FACSIMILE
OPERATION MANUAL

1. Installation
2. Setting up and Using OpenLCR
3. Sending Documents
4. Receiving Documents
5. Making Copies
6. Making Telephone Calls
7. Answering Machine Hookup
8. Special Functions
9. Printing Lists
10. Maintenance
11. Troubleshooting

SHARP®



WARNING - FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ABOUT THE TELEPHONE CONSUMER PROTECTION ACT OF 1991

"The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone facsimile machine unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission the following information:

- (1) The date and time of transmission.
- (2) Identification of either the business, business entity or individual sending the message.
- (3) Telephone number of either the sending machine, business, business entity or individual.

In order to program this information into your facsimile machine, please refer to the appropriate instructions in the operation manual."



As an ENERGY STAR® partner, SHARP has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

FOR YOUR RECORDS

 
Please record the model number and serial number below, for easy reference, in case of loss or theft. These numbers are located on the rear side of the unit. Space is also provided for other relevant information.

Model Number _____

Serial Number _____

Date of Purchase _____

Place of Purchase _____



Introduction

Welcome, and thank you for choosing a Sharp facsimile machine! The features and specifications of your new Sharp fax are shown below.








Automatic dialing	Rapid Key Dialing: 36 numbers Speed Dialing: 63 numbers
Imaging film	Initial starter roll (included with machine): Approx. 60 letter-size pages Replacement roll: UX-15CR (One roll yields approx. 500 letter-size pages)
Memory size*	476 KB (approx. 27 average pages with ECM function off)
Modem speed	14,400 bps with Automatic Fall back to 2,400 bps.
Transmission time*	Approx. 6 seconds
Resolution	Horizontal: 203 pels/inch (8 pels/mm) Vertical: Standard: 98 lines/inch (3.85 lines/mm) Fine /Halftone: 196 lines/inch (7.7 lines/mm) Super fine: 391 lines/inch (15.4 lines/mm)
Automatic document feeder	20 pages max.

*Based on ITU-T Test Chart #1 at standard resolution in Sharp special mode, excluding time for protocol signals (i.e., ITU-T phase C time only).



Recording system	Thermal transfer recording
Halftone (grayscale)	64 levels
Display	7 x 5 dots, 1 line by 16-digit display
Paper tray capacity (16- to 20-lb. paper)	Letter: 200 sheets Legal: 200 sheets
Compression scheme	MR, MH, MMR
Applicable telephone line	Public switched telephone network
Compatibility	ITU-T (CCITT) G3 mode
Input document size	Automatic feeding: Width: 5.83 to 8.5" (148 to 216 mm) Length: 5.04 to 11" (128 to 279 mm) Manual feeding: Width: 5.83 to 8.5" (148 to 216 mm) Length: 5.04 to 39.4" (128 to 1000 mm)
Effective scanning width	8.2" (208 mm) max.
Effective printing width	8.1" (206 mm) average
Contrast control	Automatic/Dark selectable
Reception modes	TEL/FAX/A.M. (Note: A.M. mode is for connecting an answering machine)
Copy function	Single/Multi/Sort (99 copies/page)
Telephone function	Yes (cannot be used if power fails)
Power requirements	120 V AC, 60 Hz
Operating temperature	41 - 95°F (5 - 35°C)
Humidity	Maximum: 80% RH
Power consumption	Standby: 3.6 W Maximum: 100 W

     



Dimensions

Width: 14.4" (365 mm)
Depth: 19.0" (482 mm)
(With attachments)
Height: 10.6" (270 mm)
(With attachments)






Weight

Approx. 10.6 lbs. (4.8 kg)

As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.



Important safety information

     - Do not disassemble this machine or attempt any procedures not described in this manual. Refer all servicing to qualified service personnel.
- Do not install or use the machine near water, or when you are wet. For example, do not use the machine near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool. Take care not to spill any liquids on the machine.
- Unplug the machine from the power outlet and telephone jack and consult a qualified service representative if any of the following situations occur:
 - Liquid has been spilled into the machine or the machine has been exposed to rain or water.
 - The machine produces odors, smoke, or unusual noises.
 - The power cord is frayed or damaged.
 - The machine has been dropped or the housing damaged.
- Do not allow anything to rest on the power cord, and do not install the machine where people may walk on the power cord.
- This machine must only be connected to a 120 V, 60 Hz, grounded (3-prong) outlet. Connecting it to any other kind of outlet will damage the machine and invalidate the warranty.





- Never insert objects of any kind into slots or openings on the machine. This could create a risk of fire or electric shock. If an object falls into the machine that you cannot remove, unplug the machine and consult a qualified service representative.
- Do not place this machine on an unstable cart, stand or table. The machine could be seriously damaged if it falls.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch bare telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use a telephone to report a gas leak in the vicinity of the leak.
- The power outlet must be installed near the equipment and must be easily accessible.

  

Important:

- This facsimile machine is not designed for use on a line which has call waiting, call forwarding, or certain other special services offered by your telephone company. If you attempt to use the fax machine in conjunction with any of these services, you may experience errors during transmission and reception of facsimile messages.
- This facsimile machine is not compatible with digital telephone systems.

 
 
 


Table of Contents

Introduction	1
Important safety information	3
Table of Contents	5
1. Installation	7
Unpacking Checklist	7
A Look at the Operation Panel	8
Connections	10
Loading the Imaging Film	15
Loading Printing Paper	19
Entering Your Name and Fax Number	22
Setting the Date and Time	25
Setting the Reception Mode	28
Volume Adjustment	29
2. Setting Up and Using OpenLCR	31
3. Sending Documents	46
Transmittable Documents	46
Loading the Document	48
Adjusting the Resolution and Contrast	50
Sending a Fax by Normal Dialing	53
Sending a Fax by Automatic Dialing	55
4. Receiving Documents	67
Using FAX Mode	67
Using TEL Mode	69
Optional Reception Settings	71
Substitute Reception to Memory	75
5. Making Copies	76
6. Making Telephone Calls	79

Table of Contents

7. Answering Machine Hookup	81
Connecting an Answering Machine	81
Optional A.M. Mode Settings	84
8. Special Functions	86
Caller ID (Requires Subscription to Service)	86
Distinctive Ring (Requires Subscription to Service)	92
Broadcasting	94
Cover Sheet	96
Batch Page Numbering	99
Blocking Reception of Unwanted Faxes	101
Sending Documents From Memory	103
Polling (Requesting a Fax Transmission)	106
Timer Operations	110
Entering and Using Programs	113
9. Printing Lists	119
10. Maintenance	126
11. Troubleshooting	128
Problems and Solutions	128
Messages and Signals	133
Clearing Paper Jams	136
FCC Regulatory Information	138
Quick Reference Guide	139
Guía de referencia rápida	141
Index	145

1. Installation

 
Unpacking Checklist

Before setting up,
make sure you
have all of the
following items.


If any are missing,
contact your dealer
or retailer.




Paper tray
cover




Paper tray

 


3 gears and
1 flange

 

Sample imaging film

 


Rapid key
labels

 

Operation
manual



 Handset




Handset cord



Telephone
line cord

A Look at the Operation Panel

A Look at the Operation Panel

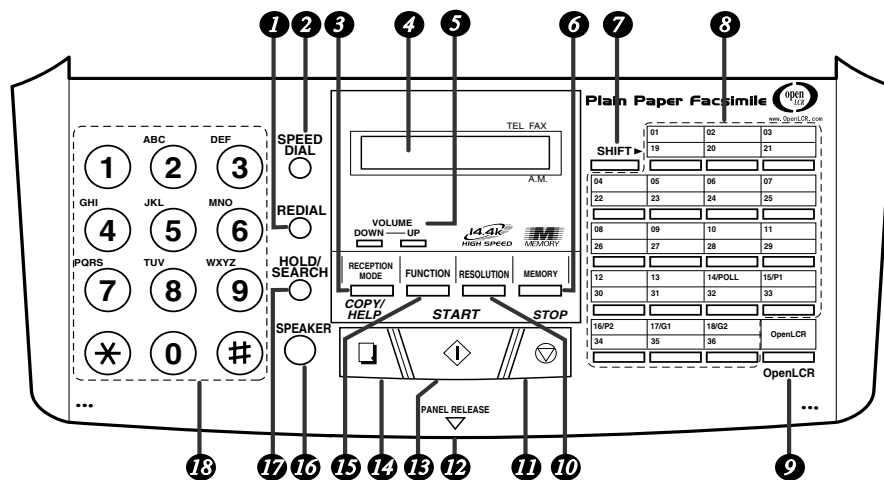

- 1 REDIAL key**
Press this key to automatically redial the last number dialed.
- 2 SPEED DIAL key**
Press this key to dial a fax or voice number using an abbreviated 2-digit Speed Dial number.
- 3 RECEPTION MODE key**
Press this key to select the mode of reception.
- 4 Display**
This displays messages and prompts during operation and programming.
- 5 VOLUME key**
Press this key to adjust the volume of the speaker when the **SPEAKER** key has been pressed, the volume of the handset when the handset is lifted, or the volume of the ringer at all other times.
- 6 MEMORY key**
Press this key to scan a document into memory before transmitting it.
- 7 SHIFT key**
Press this key before pressing the Rapid key.

A Look at the Operation Panel


1. Installation

- 8 Rapid Dial Keys**
Press one of these keys to dial a fax number automatically.
- 9 OpenLCR key**
Press this key to register for OpenLCR service and receive carrier rate data to your fax.
- 10 RESOLUTION key**
Press this key to adjust the resolution for faxing or copying.
- 11 STOP key**
Press this key to cancel an operation before it is completed.
- 12 Panel release**
Grasp this finger hold and pull toward you to open the operation panel.
- 13 START key**
Press this key to begin transmission when using Speed Dialing, Direct Keypad Dialing, or Normal Dialing.
- 14 COPY/HELP key**
When a document is in the feeder, press this key to make a copy of a document. At any other time, press this key to print out the Help List, a quick reference guide to the operation of your fax machine.
- 15 FUNCTION key**
Press this key to select various special functions.
- 16 SPEAKER key**
Press this key to listen to the line and fax tones through the speaker when faxing a document.
Note: **This is not a speakerphone.** You must pick up the handset to talk with the other party.
- 17 HOLD/SEARCH key**
Press this key to search for an auto-dial number, or, during a phone conversation, press this key to put the other party on hold.
- 18 Number keys**
Use these keys to dial numbers, and enter numbers and letters when storing auto-dial numbers.


Connections

Connections

Points to keep in mind when setting up

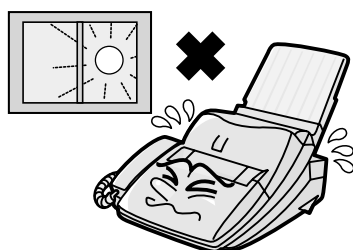


Do not place the machine in direct sunlight.

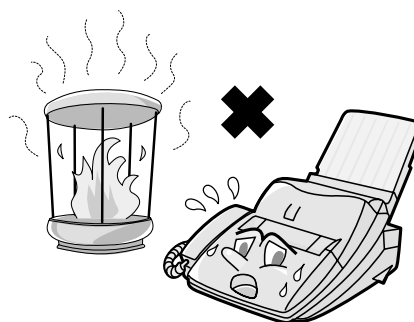

Do not place the machine near heaters or air conditioners.



Keep dust away from the machine.

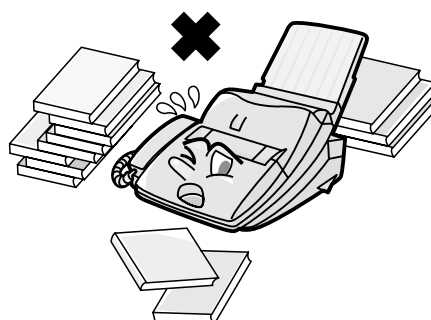

Keep the area around the machine clear.


About condensation

If the machine is moved from a cold to a warm place, it is possible that condensation may form on the scanning glass, preventing proper scanning of documents for transmission. To remove the condensation, turn on the power and wait approximately two hours before using the machine.

Connecting the Handset

Connect the handset as shown and place it on the handset rest.

- ◆ The ends of the handset cord are identical, so they will go into either jack.

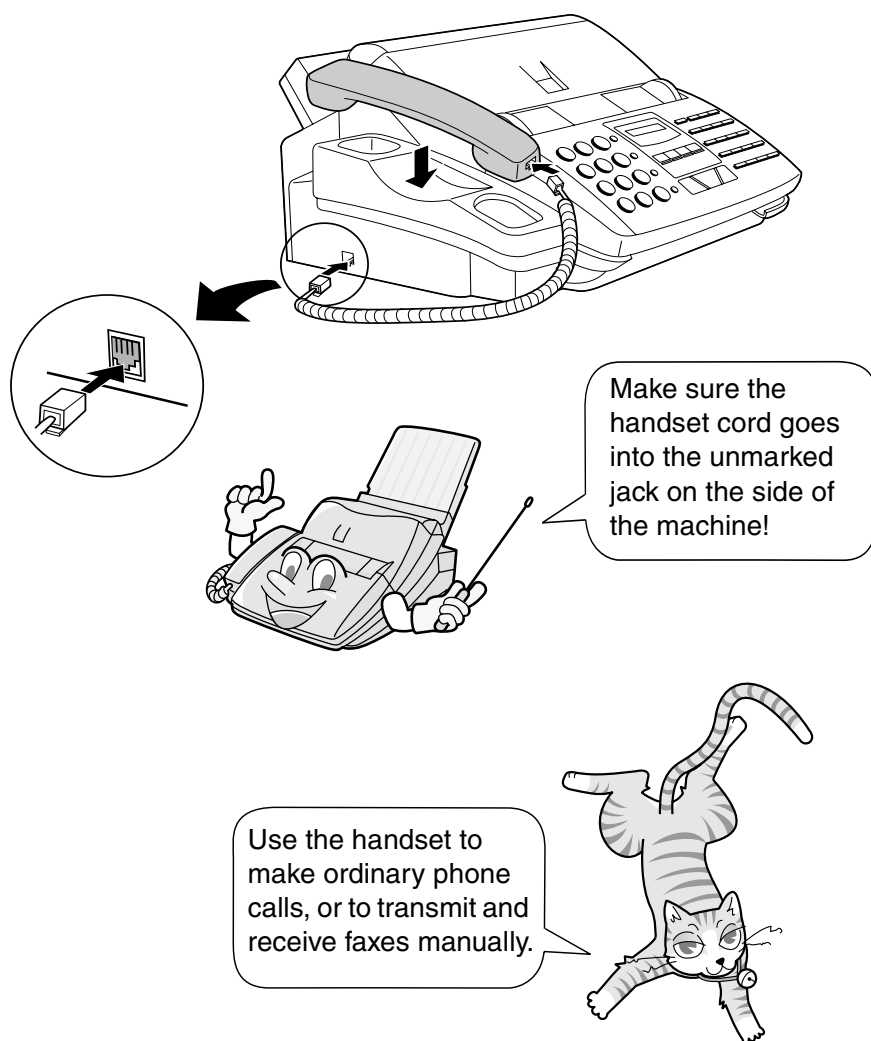


Connections

Connecting the power cord


Plug the power cord into a 120 V, 60 Hz, grounded AC (3-prong) outlet.

Caution!

Do not plug the power cord into any other kind of outlet. This will damage the machine and is not covered under the warranty.

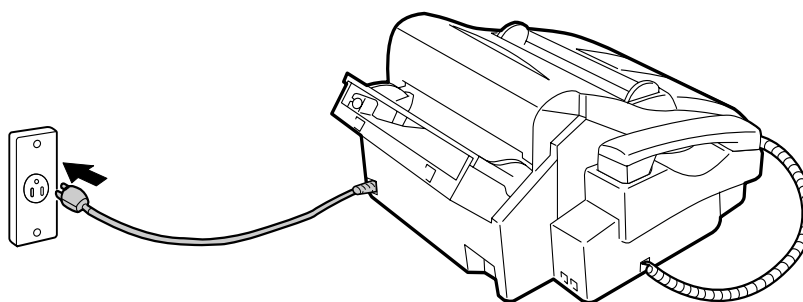


The machine does not have a power on/off switch, so the power is turned on and off by simply plugging in or unplugging the power cord.

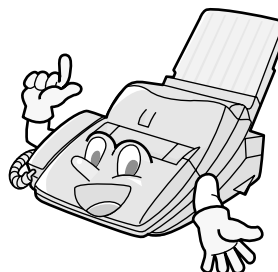

Note: If your area experiences a high incidence of lightning or power surges, we recommend that you install surge protectors for the power and telephone lines. Surge protectors can be purchased at most telephone specialty stores.

Connecting the telephone line cord

Insert one end of the line cord into the jack on the back of the machine marked **TEL. LINE**. Insert the other end into a standard (RJ11C) single-line wall telephone jack.

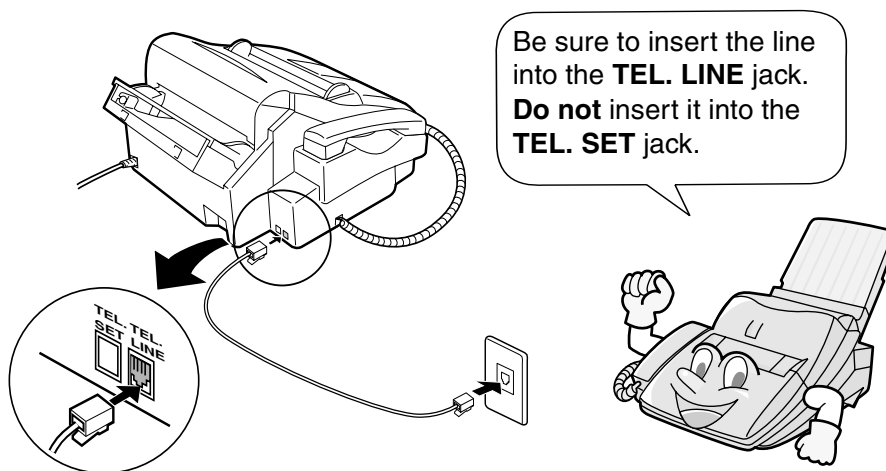

Note: The fax machine is set for tone dialing. If you are on a pulse dial line, you must set the fax machine for pulse dialing. Press the keys on the operation panel as follows:

- 1** Press these keys: **FUNCTION** **4** → **# # # #**
 The display will show:
DIAL MODE

- 2** Press **1** to select tone dialing, or **2** to select pulse dialing.
TONE **1** or **PULSE** **2**


- 3** Press the **STOP** key to return to the date and time display.



Connections

Attachments

Insert the paper tray into the back of the fax as shown.

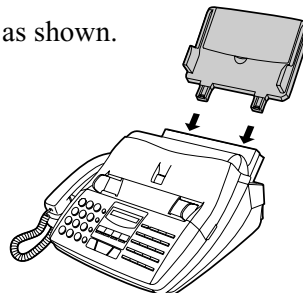


Extension phone (optional)


If desired, you can connect an extension phone to the **TEL. SET** jack on the fax.

- ◆ To connect an answering machine to your fax, see Chapter 7, *Answering Machine Hookup* (page 81).

-
- 1** Remove the seal covering the **TEL. SET** jack.

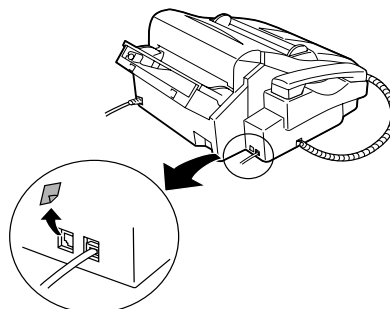

-
- 2** Connect the extension phone line to the **TEL. SET** jack.

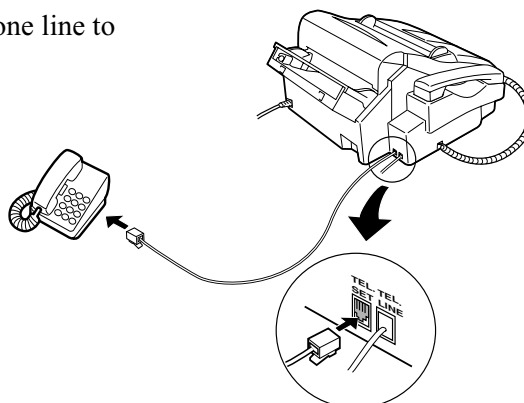

Loading the Imaging Film

Your fax uses a roll of imaging film to create printed text and images. The print head in the fax applies heat to the imaging film to transfer ink to the paper. Follow the steps below to load or replace the film.


The initial starter roll of imaging film included with your fax can print about 60 letter-size pages.



When replacing the film, use a roll of Sharp UX-15CR imaging film. One roll can print about 500 letter-size pages.




- 1 Press the release marked **OPEN** and open the print compartment cover.

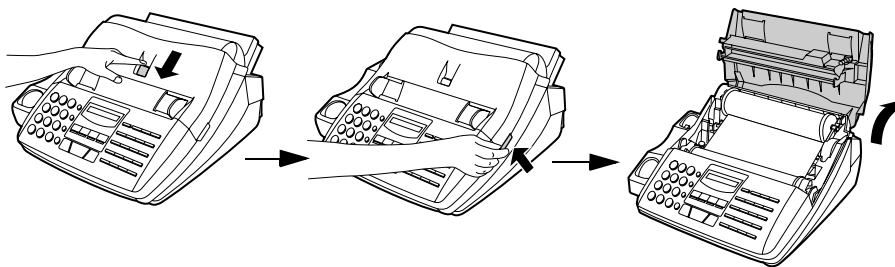

- **Caution!** The printing head (the strip of metal on the underside of the cover) applies heat to the printing film. It may be hot if a document has just been printed.


Loading the Imaging Film

- 2** If you are replacing the imaging film, take the old film out of the printing compartment and remove the three (3) green gears and the green flange from the ends of the spools.
DO NOT DISCARD THE GREEN GEARS AND THE GREEN FLANGE!

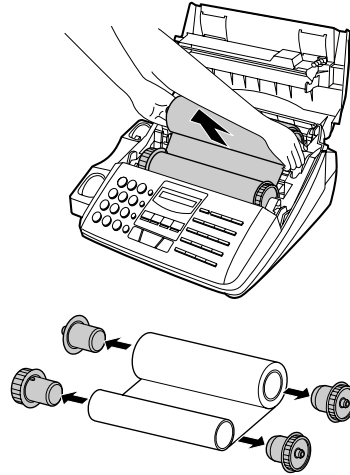


- 3** Take the new film out of its package, and insert two of the gears provided with the fax into the ends of the spool with film. Make sure that the two tabs on the gears fit properly into the slots in the ends of the spool.

- Do not yet remove the band which holds the spools together.

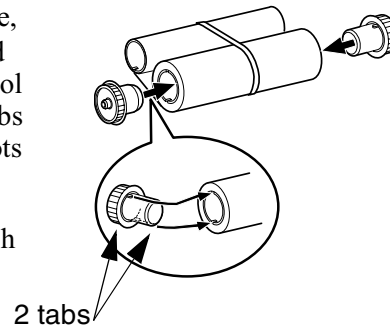


- 4** Hold the empty spool so that the end with only one slot is on the left, and lower the spools into the front of the printing compartment. The gears in the ends of the spool with film should fit into the slots on each side of the printing compartment.

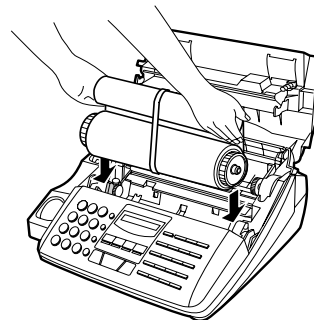


Loading the Imaging Film

1. Installation

- 5** Cut the band which holds the spools together with scissors, and remove it. Insert the remaining gear into the right end of the empty spool and the flange into the left end of the empty spool. Make sure the tabs on the gear and the flange fit into the slots in the ends of the spool (the gear has two tabs and the flange has one tab).

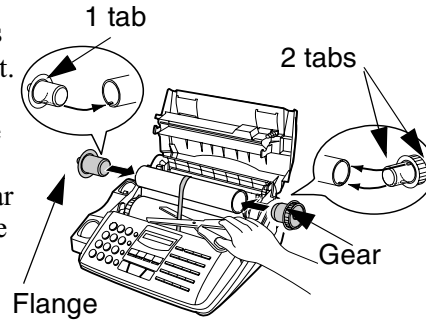


- 6** Pull the empty spool toward the back of the compartment, unwinding the film as you pull.

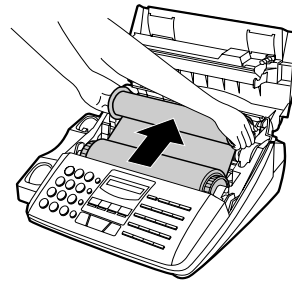


- 7** Insert the empty spool into the back of the compartment so that the gear and the flange fit into the slots on the sides of the compartment.

- Make sure that the gear engages with the gear below it.

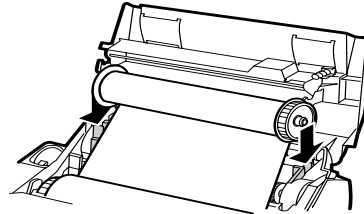


- 8** Wind the film slightly (rotate the gear on the right side of the empty spool) so that there is no slack in the film. Make sure that both edges of the film wind onto the spool evenly.

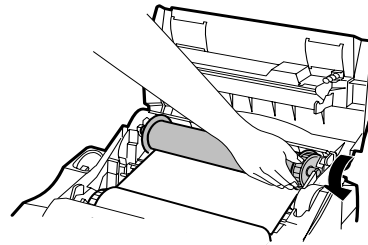

Loading the Imaging Film


- 9** Close the print compartment cover, making sure it clicks into place.

- **Caution!** Close the cover slowly to make sure it doesn't pinch your fingers.

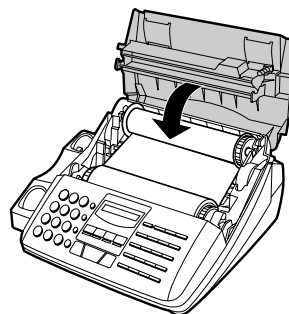

- 10** Load paper in the paper tray and then press the following keys to initialize the film.

 Note: Paper must be loaded before the film can be initialized. To load paper, see *Loading the Printing Paper*.



When to replace the imaging film

Replace the imaging film when the display shows:

FILM END

Use the following imaging film, which is available from your dealer or retailer:

Sharp UX-15CR Imaging Film

Caution!

The text of documents printed with the imaging film is visible on the used film. If confidential information has been printed, dispose of the film appropriately.

Loading Printing Paper

The paper tray holds the paper on which received documents and copies are printed. Up to 200 sheets of letter or legal size paper from 16 to 20 lbs. (60 to 75 g/m²) can be loaded in the tray. Less sheets can be loaded when using heavier paper. The maximum allowed paper weight is 24 lbs. (90 g/m²).


Note: When receiving or copying documents, do not allow more than 100 pages to collect in the received document outlet. Otherwise, the outlet may become obstructed, causing paper jams.

Caution!


Do not use the blank side of paper that has already been printed on.

- 1 Remove the paper cover if it is on the paper tray.

- If you are going to load legal size paper, flip up the paper tray extender.

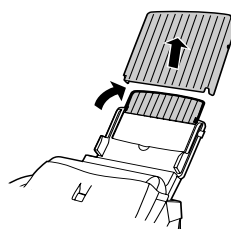


- 2 Fan the paper, and then tap the edge against a flat surface to even the stack.

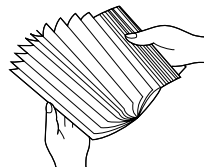

- 3 Pull the paper release plate toward you and insert the stack of paper into the tray, print side down.


- If paper remains in the tray, take it out and combine it into a single stack with the new paper before adding the new paper.

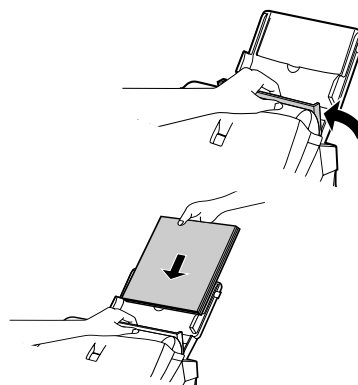


Loading Printing Paper

- 4** Replace the paper cover on the paper tray.

- **Important:** Be sure to replace the paper cover before you put back the paper release plate down.

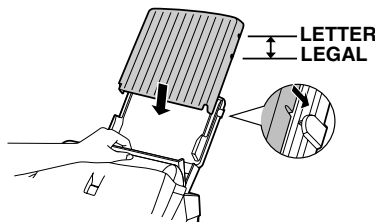

Note: If the display shows the following alternating messages when making a copy or receiving a fax, check the paper tray. If the tray is empty, add paper and then press the **START** key. If there is paper, make sure it is inserted correctly and then press the **START** key.

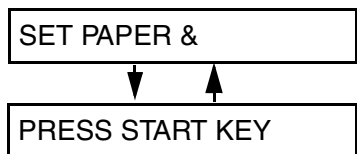

- 5** The fax has been set at the factory to scale the size of received faxes to letter size paper. If you have loaded legal paper, you must change the paper size setting to legal. Press these keys:

The display will show:

 
PAPER SIZE SET

Press **1** to select LETTER or **2** to select LEGAL.

The display will show:

COPY CUT-OFF

Press the **STOP** key to return to the date and time display.



LETTER LEGAL

1 or **2**



Loading Printing Paper

1. Installation

- 6** Your fax has been set at the factory to print at normal contrast. Depending on the type of paper you have loaded, you may find that you obtain better print quality by changing the setting to LIGHT. Press these keys:

The display will show:

PRINT CONTRAST

Press **1** to select NORMAL or 2 to select LIGHT.

The display will show:

PAPER SIZE SET

Press the **STOP** key to return to the date and time display.

FUNCTION



Normal



or

Light



STOP



Entering Your Name and Fax Number

Entering Your Name and Fax Number

Before you can begin using your fax, you must enter your name and fax (telephone) number. You also need to set the date and time.




Once you enter this information, it will automatically appear at the top of each fax page you send.



Important!

The law requires that your name, telephone/fax number, and the date and time appear on each fax message you send. Enter your name and fax number here and set the date and time as explained in the following section to have the fax machine include this information automatically at the top of your fax messages.

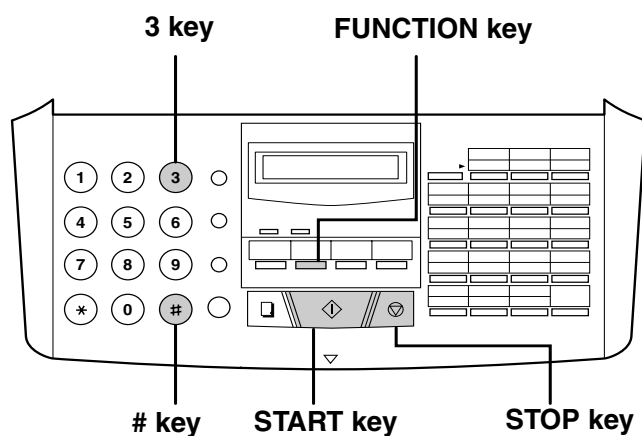

Note: The imaging film and printing paper must be loaded before your name and fax number can be entered.

Entering Your Name and Fax Number

1. Installation

- 1** Press these keys:

FUNCTION

3

The display will show:

ENTRY MODE

- 2** Press the # key twice.

#

The display will show:

OWN NUMBER SET

- 3** Press the **START** key.



The display will show:

ENTER FAX #

- 4** Enter your fax number by pressing the number keys (max. of 20 digits).

3 1 2 # →
4 4 2 # →
4 4 1 1

- To insert a space between digits, press the # key. To insert a "+", press the * key.

(Example)

- If you make a mistake, press the **SPEED DIAL** key to backspace and clear the mistake.

- 5** Press the **START** key to enter the fax number in memory.









 







 










 







 







 










 









 




 














The display will show:

 ENTER YOUR NAME

Entering Your Name and Fax Number

- 6** Enter your name by pressing number keys for each letter as shown in the chart below. Up to 24 characters can be entered.


Example: SHARP = 77777 444 22 7777  77

SPACE =  	J =  	T =  
A =  	K =   	U =   
B =   	L =    	V =    
C =    	M =  	W =  
D =  	N =   	X =   
E =   	O =    	Y =    
F =    	P =  	Z =    
G =  	Q =   	
H =   	R =    	
I =    	S =    	

Cursor: A dark square mark in the display that indicates where a number or letter will be entered.

- ◆ To enter two letters in succession that require the same key, press the **SPEAKER** key after entering the first letter.
(The **SPEAKER** key moves the cursor forward, and the **HOLD/SEARCH** key moves the cursor backward.)
- ◆ To clear a mistake, press the **SPEED DIAL** key.
- ◆ To change case, press the **REDIAL** key.
- ◆ To enter one of the following symbols, press the **#** key or the ***** key repeatedly:
./!"#\$%&'()******+, -.;<=>?@[**¥**]^_{'|}→←

 - 7** Press the **START** key.



The display will show:

SECURITY SELECT

- 8** Press the **STOP** key to return to the date and time display.




Setting the Date and Time

1. Installation

Setting the Date and Time


The date and time appear in the display and are printed at the top of every page you fax.

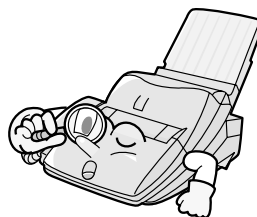

Set the date and time by pressing the keys on the operation panel as shown below.

Do not set the date and time if you are using OpenLCR!

OpenLCR automatically sets the date and time each time your fax calls OpenLCR and receives rate data. To ensure accurate use of the rate data, do not change the date and time setting yourself. OpenLCR also sets the date and time for you if you perform the fax transmission test (see page 36).

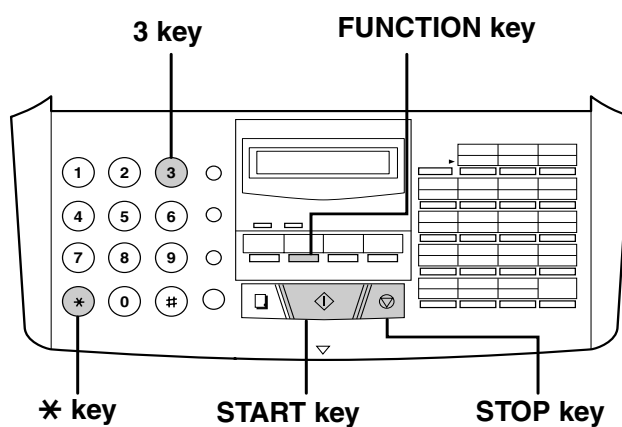

Note: The imaging film and printing paper must be loaded before the date and time can be set.

1 Press these keys:

FUNCTION

3

The display will show:

ENTRY MODE

Setting the Date and Time

2 Press these keys:



The display will show:

DATE & TIME SET

3 Press the **START** key.

- The currently set date will appear in the display.



4 Enter a two-digit number for the month ("01" for January, "02" for February, "12" for December, etc.).



Example: January

- To correct a mistake, press the **SPEED DIAL** key to move the cursor back to the mistake and then enter the correct number.

5 Enter a two-digit number for the day ("01" to "31").



Example: the 5th

6 Enter the year (four digits).



Example: 2000

7 Enter a two-digit number for the hour ("01" to "12") and a two-digit number for the minute ("00" to "59").



Example: 9:25

Setting the Date and Time

1. Installation

- 8** Press the ***** key to select A.M. or the **#** key to select P.M.

A.M.

P.M.



or



- 9** Press the **START** key to start the clock.



The display will show:

DAY LIGHT SAVING

- 10** Press the **STOP** key to return to the date and time display.

**Daylight Saving Time**

If desired, you can set the clock to move forward and backward automatically at the beginning and end of Daylight Saving Time. To turn on this function, press the panel keys as follows:

- 1** Press these keys:

FUNCTION



The display will show:

DAY LIGHT SAVING

- 2** Press **1** to turn on the Daylight Saving Time function, or **2** to turn it off.

YES

NO



or



- 3** Press the **STOP** key to return to the date and time display.



Setting the Reception Mode

Setting the Reception Mode

Your fax has three modes for receiving incoming calls and faxes:

TEL mode:

Select this mode when you want to receive both phone calls and faxes on the line connected to the fax machine. **All calls, including faxes, must be answered by picking up the fax machine's handset** or an extension phone connected to the same line.

FAX mode:


Select this mode when you only want to receive faxes on your line. The fax machine will automatically answer all calls on four rings and receive incoming faxes.

A.M. mode:

Use this mode only if you have connected an answering machine to the fax (see Chapter 7). Select this mode when you go out to receive voice messages in your answering machine and faxes on your fax machine.

Setting the reception mode


Press the **RECEPTION MODE** key until the arrow in the display points to the desired mode.

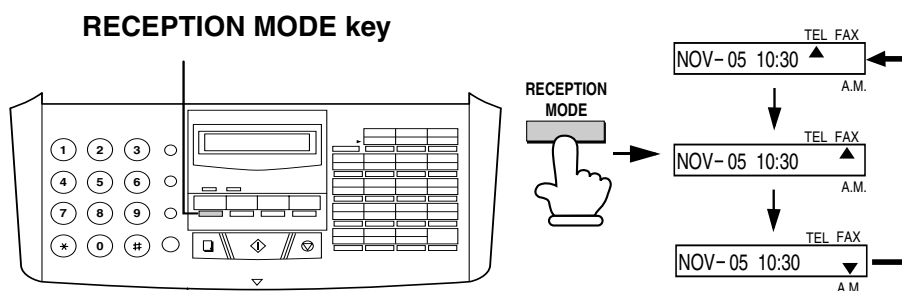

For more information on receiving faxes in TEL and FAX modes, see Chapter 4, *Receiving Documents* (page 67). For more information on using A.M. mode, see Chapter 7, *Answering Machine Hookup* (page 81).

Volume Adjustment

You can adjust the volume of the speaker and ringer using the **UP** and **DOWN** keys.

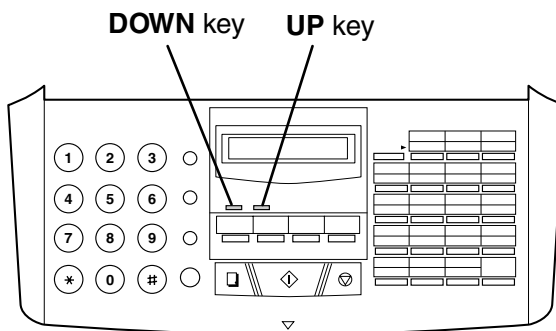

Speaker


- 1 Press the **SPEAKER** key.

SPEAKER



- 2 Press the **UP** or **DOWN** key.

Display:

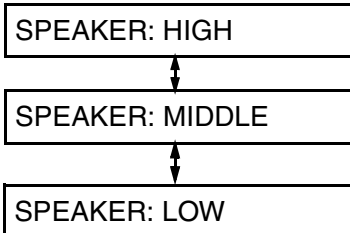

DOWN

or

UP



- 3 When the display shows the desired volume level, press the **SPEAKER** key to turn off the speaker.

SPEAKER




Volume Adjustment

Handset

- 1 Lift the handset.

- 2 Press the **UP** or **DOWN** key.

Display:

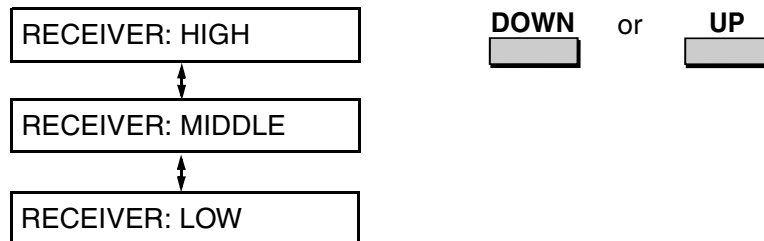


- 3 When the display shows the desired volume level, replace the handset.

Ringer

- 1 Press the **UP** or **DOWN** key. (Make sure the **SPEAKER** key has not been pressed and the handset is not lifted.)

Display:

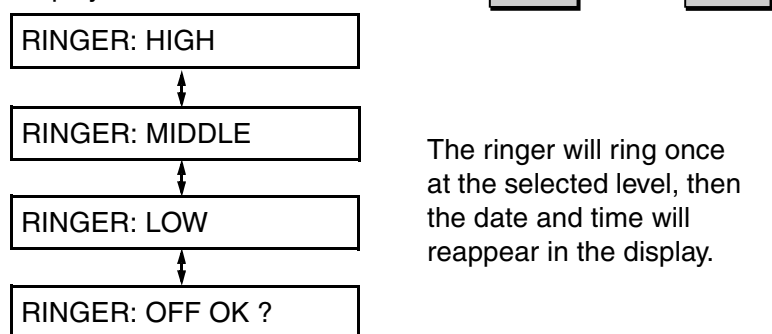

- 2 If you selected RINGER: OFF OK ?, press the **START** key.



2. Setting Up and Using OpenLCR

Your fax machine features OpenLCR technology, which helps you save money on long distance and international phone calls (both fax and voice) by automatically routing each call for the best available rate.

- ◆ OpenLCR service is free of charge. The only cost to you is that of a periodic call (usually once every three months) to OpenLCR to receive the latest rate data. (Once you have registered with OpenLCR, your fax machine automatically makes this call.)
- ◆ All calls routed by OpenLCR are consolidated on your monthly phone bill.

To take advantage of this feature, you will need to register with OpenLCR and download the rate data to your fax machine.



You can register with OpenLCR by fax, phone, or through OpenLCR's Web site (www.OpenLCR.com).

- ◆ Before registering, be sure to read the information on the **Fax Transmission Test and OpenLCR Line Activation Form** and **Terms of Service** sheet included with your fax machine. If you have any questions, call OpenLCR at 970-206-1207.
- ◆ OpenLCR uses Caller ID for identification purposes when your fax calls OpenLCR to receive rate information. Even if you have requested your telephone company to withhold your Caller ID information when you place calls, your fax will still automatically transmit this information only when it calls OpenLCR.
- ◆ It is possible to register for and use OpenLCR if you do not subscribe to a Caller ID service; however, in some instances where rate data must be changed on an emergency basis, your fax may not

Setting Up and Using OpenLCR

be able to respond automatically to OpenLCR's call to notify your fax that it must receive new rate data. If this occurs, old, incorrect data will continue to be used.

- ◆ Please note that the agreement you enter into by registering is between you and OpenLCR; it is not between you and any carriers. OpenLCR service is only available in the U.S.A..


Registering by fax

To register by fax, fill in the **Fax Transmission Test and OpenLCR Line Activation Form**, and then fax the form as follows:

- 1 Place the form with the side you wrote on face down, and push it gently into the document feeder of the fax machine.


The display will show:

READY TO SEND

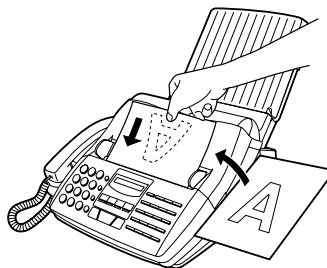

- 2 Press the **OpenLCR** key, the **5** key, and then the **START** key.

 - Your fax automatically calls OpenLCR and sends the form. After the form is sent, your fax will automatically receive the rate data. This lasts one or two minutes. When downloading is completed, the display will briefly show **DOWNLOAD OK!!** and then revert to the date and time. Your fax will print out the registration form to confirm that it was received.
- OpenLCR will also program the date and time and your fax number in your fax machine.




Setting Up and Using OpenLCR

Registering by phone


To register by phone, follow these steps:

- 1** Pick up the handset on the fax machine.

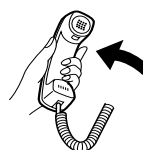



2. Setting Up
OpenLCR

 - 2** Press the **OpenLCR** key and then the **1** key.



- 3** If the display shows the alternating messages at right, press the number keys to enter your fax/phone number, including the area code (the number must be 10 digits long). When finished, press the **START** key.

 (If the message at right doesn't appear, this step is not necessary.)

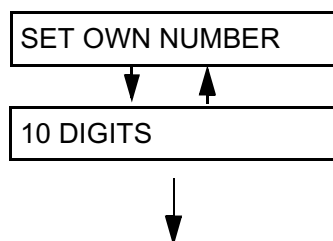

(Example)

Important!

Be sure that you enter your correct area code and fax number. If not, your fax may not dial the correct number to connect to OpenLCR.

Setting Up and Using OpenLCR

4 Follow the instructions you hear.

- ◆ **Note:** If you are on a pulse dial line, press the * key before pressing the number keys to respond.
(This makes your fax temporarily issue tone signals when you press the number keys.)
- ◆ When registration is completed, your fax machine will receive the rate data from OpenLCR. This will last one or two minutes. When downloading is completed, the display will briefly show DOWNLOAD OK!! and then revert to the date and time.
- ◆ OpenLCR will also program the date and time and your fax number in your fax machine.

Registering through OpenLCR's Web site

You can also register at OpenLCR's Web site, **www.OpenLCR.com**. After registering you will need to receive the rate data manually (service is not activated until your fax receives the rate data). See *Downloading (receiving) the rate data manually* on the following page.



The rate data that you receive is based on the address you provide when registering with OpenLCR. If you move, the rate data will not be correct for your new location. In this case, repeat the registration procedure to give OpenLCR your new address.

Note: If you wish to connect more than one OpenLCR-enabled device to the same line, please call OpenLCR at 970-206-1207.

Setting Up and Using OpenLCR

Note: OpenLCR cannot be used if your fax machine is connected to a Private Branch Exchange (PBX).

Downloading (receiving) the rate data manually

Your fax machine will automatically call OpenLCR and download updated rate data about once every three months. Normally you will not need to download the rate data manually.

- ◆ If you register through OpenLCR's Web site, you must manually download the rate data to activate service.
- ◆ If the fax machine is unplugged or some other interruption occurs in the power, you will need to manually download the rate data.

Press these keys to call OpenLCR and initiate downloading:



Downloading lasts one or two minutes. During this time the display will show:

LCR DOWNLOADING

When downloading is completed, the display will briefly show DOWNLOAD OK!! and then revert to the date and time. OpenLCR will also program the date and time and your fax number in your fax machine.

Setting Up and Using OpenLCR

Fax transmission test


Even if you are not ready to register for OpenLCR service, we recommend that you test your fax setup by filling out Section A of the **Fax Transmission Test and OpenLCR Line Activation Form** and faxing it to OpenLCR as shown below. The test is free of charge and does not place you under any obligation to register with OpenLCR.

- ◆ If the test sheet is successfully transmitted, it will be faxed back to you on the same connection. This lets you confirm that your setup is okay.
- ◆ After receiving the test sheet, the current date and time will automatically be programmed in your fax machine. This saves you the trouble of setting the date and time in the fax yourself.

- 1** Place the form with Section A face down, and push it gently into the document feeder of the fax machine.


The display will show:

READY TO SEND

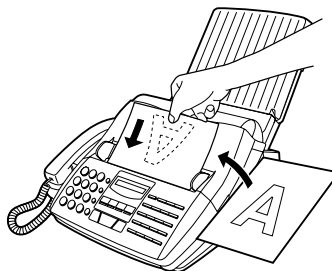

- 2** Press the **OpenLCR** key, the **5** key, and then the **START** key.

 - Your fax machine will automatically call OpenLCR and send the form. The form will then be faxed back to you, and the current date and time programmed in your fax machine.



Setting Up and Using OpenLCR

Using OpenLCR

When you have registered with OpenLCR and downloaded the rate data to your fax machine, a highlighted “C” will appear in the date and time display to indicate that the OpenLCR feature is activated.

JAN-19 02:16 **C**

“C” indicates that
OpenLCR is activated

Each time you make a long distance phone or fax call, the fax machine will automatically route the call through the least expensive carrier based on the downloaded rate information.

Don't unplug the
fax, or the rate
data will be lost!

**Caution!**








If you unplug the fax machine or an interruption occurs in your power supply, the rate data will be erased. If this happens, the highlighted “C” in the display will blink to alert you.

The fax machine will automatically call OpenLCR within the next 24 hours to receive new rate data; however, if you want to use OpenLCR service before that time, you should download the rate table manually as explained on page 35.

- ◆ We recommend that you do not unplug the fax machine on a regular basis (for example at night or on the weekends), as this will result in a large number of calls to OpenLCR and a higher phone bill depending on where you live.

Setting Up and Using OpenLCR

The following table shows marks related to OpenLCR that may appear in the display.

Mark	Meaning
	OpenLCR has been activated and is ready for use.
 (Blinking)	OpenLCR cannot be used because the rate data has been erased. Your fax will automatically call OpenLCR within the next 24 hours to receive new data, or you can download the data manually if you need to use OpenLCR immediately. See <i>Downloading (receiving) the rate data manually</i> on page 35.
	The rate data in the fax is no longer correct and the fax cannot connect to OpenLCR to obtain new data. See <i>What to do if "E" appears in the display</i> on page 41.
	OpenLCR has been temporarily turned off. See <i>Temporarily turning off OpenLCR</i> below.
	Rate data was not yet available when your fax called OpenLCR. Your fax will automatically call OpenLCR again when the rate data is available. Until that time, long distance calls will be routed through your primary carrier.
 (Blinking)	Your fax will automatically call OpenLCR within the next 24 hours to learn when correct rate data will be available.
	Your fax did not receive rate data because OpenLCR was unable to identify it by Caller ID. To remove the "H" display, press the OpenLCR key followed by #, 1, 8, 4, and # . To receive OpenLCR service, you will need to contact your phone company and allow it to send your Caller ID information when you place calls. After this, register once again with OpenLCR.

Setting Up and Using OpenLCR

Temporarily turning off OpenLCR

If needed, you can temporarily turn off OpenLCR.

- ◆ When you temporarily turn off OpenLCR, long distance and international calls will not be routed by OpenLCR. However, your fax will still call OpenLCR periodically to receive rate data.

2. Setting Up
OpenLCR

- 1** Press these keys:

The display will show:

LCR DIAL SELECT

FUNCTION

8 #

- 2** Press **2** (NO) to turn off OpenLCR.
(Press **1** (YES) to turn it back on.)

2

- When you turn off OpenLCR, the highlighted “C” in the display will change to “-”.

- 3** Press the **STOP** key to return to the date and time display.

**To stop using OpenLCR**

Press the following sequence of keys if you want to stop using the Open LCR feature.

OpenLCR
1 8 4

- ◆ Calls will not be routed by OpenLCR and the fax machine will not call OpenLCR to update data.

To resume use of OpenLCR, press these keys:


OpenLCR
1 8 6

Setting Up and Using OpenLCR


Changing your user profile

To call OpenLCR to change your user profile, follow these steps:

- 1** Pick up the handset on the fax machine.


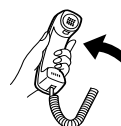


 - 2** Press the **OpenLCR** key and then the **3** key.



- 3** If the display shows the alternating messages at right, press the number keys to enter your fax/phone number, including the area code (the number must be 10 digits long). When finished, press the **START** key.

 (Note: If the message at right doesn't appear, this step is not necessary.)

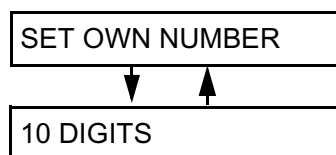

Important!

Be sure that you enter your correct area code and fax number. If not, your fax may not dial the correct number to connect to OpenLCR.

 
- 4** Follow the instructions you hear.

- ♦ **Note:** If you are on a pulse dial line, press the ***** key before pressing the number keys to respond.
(This makes your fax temporarily issue tone signals when you press the number keys.)

Setting Up and Using OpenLCR

What to do if “E” appears in the display

A highlighted “E” will appear in the display in place of “C” if the rate data in the fax is out-of-date and the fax is unable to obtain new data. When this happens, OpenLCR routing will not take place.

JAN-19 02:16 E

“E” indicates that the rate data is out-of-date.

2. Setting Up
OpenLCR

This will only occur if the fax machine is unable for some reason to make its periodic call to OpenLCR to receive new rate data.

First try downloading the rate data manually by pressing the **OpenLCR** key and **2** key as explained in *Downloading (receiving) the rate data manually* on page 35. If this doesn't work, proceed to the following section, *What to do if you cannot connect to OpenLCR*.

What to do if you cannot connect to OpenLCR

If you are unable to connect to OpenLCR when you use the OpenLCR key to register or manually download data, it is likely that the phone number that the fax machine dials when you press the **OpenLCR** key is no longer correct.

To obtain the correct phone number, call OpenLCR at 970-206-1207, and then program the number into the fax machine as explained on the following page.

♦ **Note:** The number that you will obtain is the number for manually downloading rate data (dialed by pressing the **OpenLCR** key and **2**). When you manually download the rate data, the new numbers for registering (dialed by pressing the **OpenLCR** key and **1, 3, or 5**) will also be programmed in your fax machine.

Setting Up and Using OpenLCR

1 Press these keys:

The display will show:

CENTER # MODE

FUNCTION



2 Press 1 (SET) to set the new phone number.



- **Note:** If you want to restore the factory-set number, press **2** for CLEAR and then go to Step 4.

3 Press the number keys to enter the new phone number.

4 Press the **START** key to store the number.



5 Press the **STOP** key to return to the date and time display.



6 Press the **OpenLCR** key and **2** to download new rate data.



- If you have not yet registered with OpenLCR, your fax will receive new phone numbers that will allow you to connect to OpenLCR. Register using one of the procedures described at the beginning of this chapter.


Setting Up and Using OpenLCR

Note: The following settings are not required as of the printing date of this manual. OpenLCR will inform you through its Web site (www.OpenLCR.com) if the settings become necessary in the future.

Selecting a long or short call

Before you make a long distance or international phone/fax call, select whether the call will be a long call or a short call.


Your fax needs to know whether the call will be long or short to route it for the best rate.

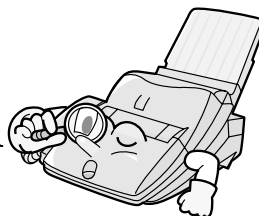

2. Setting Up
OpenLCR

1 Press these keys:

The display will show:

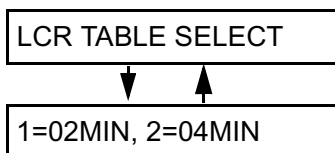

Note: If the display shows TABLE NOT EXIST, you must first download the rate

2 Press **1** to select the SHORT TIME setting, or **2** to select the LONG TIME setting.

SHORT LONG

1 or **2**

- The initial SHORT TIME setting is 2 minutes, and the initial LONG TIME setting is 4 minutes. If desired, you can change these settings as explained on the following page.
- The short/long time selection will remain in effect for all calls until you change it.

Setting Up and Using OpenLCR

Changing the **SHORT TIME** and **LONG TIME** settings


The initial **SHORT TIME** setting is 2 minutes, and the initial **LONG TIME** setting is 4 minutes. If the typical durations of your short and long calls are different, you should change the time settings to ensure that OpenLCR routes your calls for the best rate.

- ◆ For example, if your fax transmissions normally last about 3 minutes and your phone calls last about 5 minutes, set **03** for the **SHORT TIME** and **05** for the **LONG TIME**. Before sending a fax, select the **SHORT TIME** setting (03MIN) in the procedure on the preceding page. Before making a phone call, select the **LONG TIME** setting (05MIN).
- ◆ When you change the **SHORT TIME** and/or **LONG TIME** setting, the fax machine will automatically call OpenLCR and receive rate data for the new times.


1 Press these keys:




The display will show:

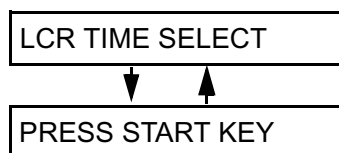

2 Press the **START** key.

 

The display will show:

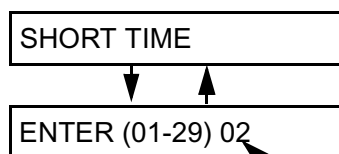


The current setting appears here.

Setting Up and Using OpenLCR

- 3** Enter a 2-digit number (**01** to **29**) for the number of minutes of the **SHORT TIME** setting. (If the number is less than 10, enter a **0** before the number.) The display will show your selection and then show:

0 3

Example: 3 minutes

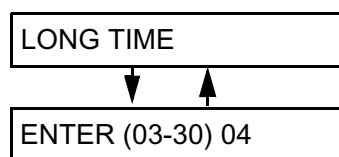


2. Setting Up
OpenLCR

- 4** Enter a 2-digit number for the number of minutes of the **LONG TIME** setting. (The number must be greater than the **SHORT TIME** setting and no more than **30**.) The display will show your selection. If the settings were changed, it will then show:


0 5

Example: 5 minutes

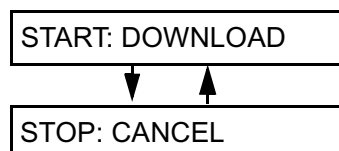

Note: If the display shows **NO SERVICE**, you must first download the rate data.

 - 5** Press the **START** key to begin receiving the rate data for the new settings.



- Your fax calls OpenLCR and receives the data. This lasts one or two minutes.
- **Note:** If you do not press the **START** key to receive new data, the settings will revert to their previous state.


3. Sending Documents

Transmittable Documents


Size and weight

The size and weight of documents that you can load in the document feeder depend on whether you load one page at a time or several pages at once.

Loading one page at a time:

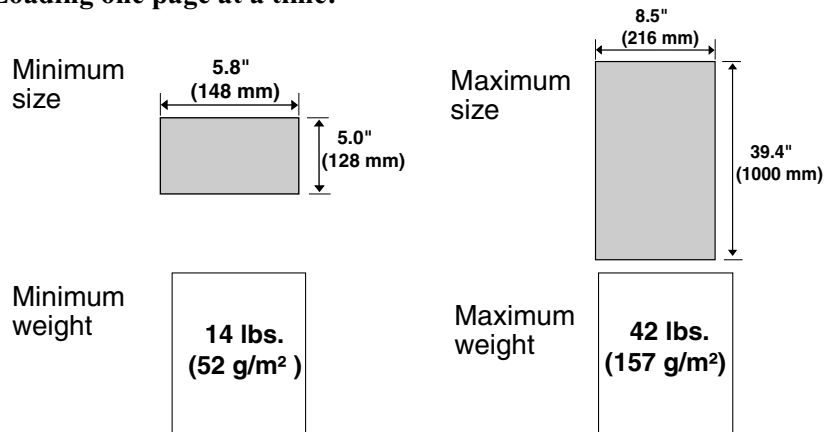


Loading several pages at once:

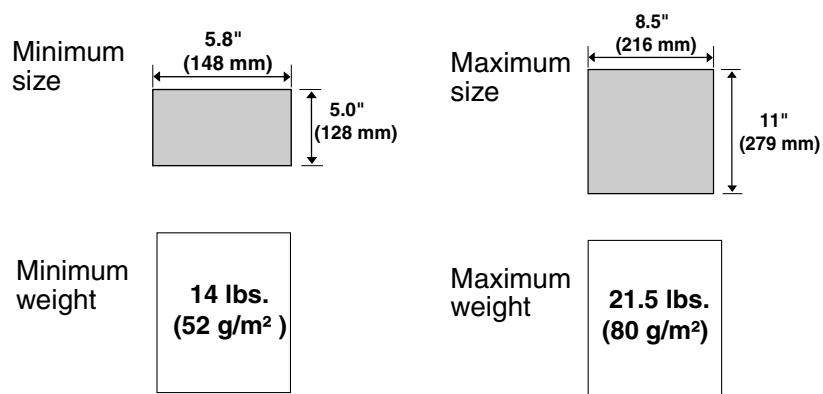

Transmittable Documents

Note: Letters or graphics on the edges of a document will not be scanned.

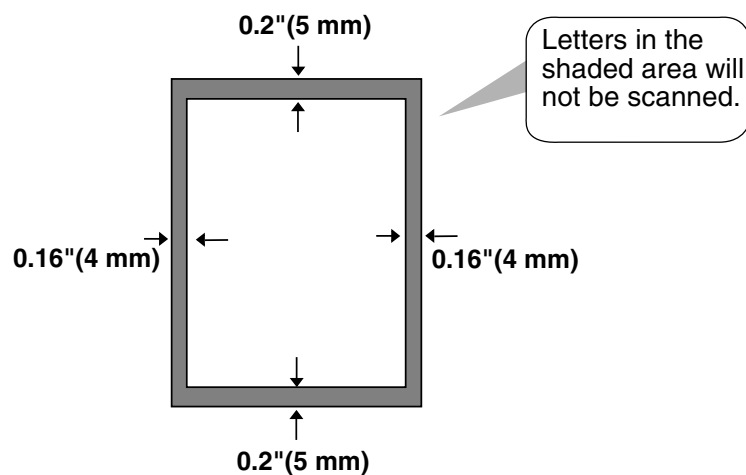

3. Sending Documents

Other restrictions

- ◆ The scanner cannot recognize yellow, greenish yellow, or light blue ink.
- ◆ Ink, glue, and correcting fluid on documents must be dry before they pass through the document feeder.
- ◆ All clips, staples, and pins must be removed from documents before loading in the feeder. If these are not removed, they may damage the machine.
- ◆ Documents which are patched, taped, torn, smaller than the minimum size, carbon backed, easily smudged, or have a slippery coated surface should be photocopied, and the copy loaded in the feeder.
- ◆ If the leading edge of the document is bent or curves up, straighten it before placing the document in the feeder.


Loading the Document

Loading the Document

Up to 20 pages can be placed in the feeder at one time. The pages will automatically feed into the machine starting from the bottom page.

- ◆ If you need to send or copy more than 20 pages, place the additional pages gently and carefully in the feeder just before the last page is scanned. Do not try to force them in, as this may cause double-feeding or jamming.
- ◆ If your document consists of several large or thick pages which must be loaded one at a time, insert each page into the feeder as the previous page is being scanned. Insert gently to prevent double-feeding.


- 1** Adjust the document guides to the width of your document.

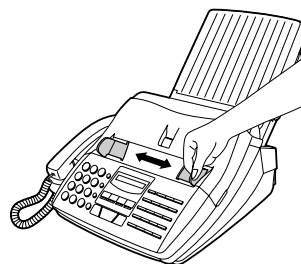

- 2** Place the document face down and push it gently into the document feeder. The top edge of the document should enter the machine first.

- The feeder will draw the leading edge of the document into the machine. The display will show:

READY TO SEND

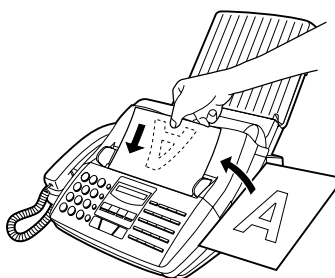

- 3** Adjust the resolution and/or contrast settings (if desired) as explained in *Resolution and Contrast* on page 50, then dial the receiving machine as explained in *Sending a Fax by Normal Dialing* on page 53.



Loading the Document

Removing a document from the feeder

If you need to remove a document from the feeder, open the operation panel.




Important!


Do not try to remove a document without opening the operation panel. This may damage the feeder mechanism.

3. Sending Documents


- 1** Grasp the finger hold and pull up to open the operation panel.

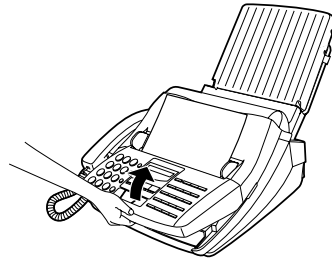

- 2** Remove the document.

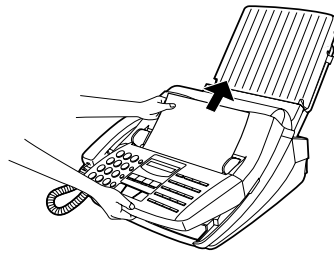

- 3** Close the operation panel.
 - Press down on both front corners of the panel to make sure it clicks into place.

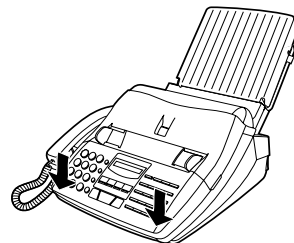



Adjusting the Resolution and Contrast


Adjusting the Resolution and Contrast

If desired, you can adjust the resolution and contrast before sending a document.

The default resolution setting is STANDARD and the default contrast setting is AUTO.



You must adjust the settings each time you don't want to use the default settings.

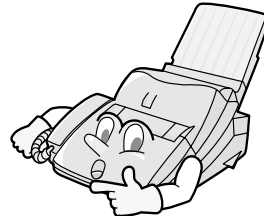

Note: The resolution and contrast settings are only effective for sending a document. They are not effective for receiving a document.

Resolution settings

STANDARD

Use STANDARD for ordinary documents. This setting gives you the fastest and most economical transmission.

FINE

Use FINE for documents containing small letters or fine drawings.

SUPER FINE

Use SUPER FINE for documents containing very small letters or very fine drawings.

HALF TONE

Use HALF TONE for photographs and illustrations. The original will be reproduced in 64 shades of gray.

 
Contrast settings

AUTO

Use AUTO for normal documents.

DARK


Use DARK for faint documents.



Adjusting the Resolution and Contrast


1 Load the document(s).

- The document must be loaded before the resolution and contrast can be adjusted.

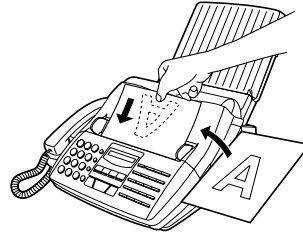

2 Press the **RESOLUTION** key one or more times until the desired resolution and contrast settings appear in the display.

- The first time you move through the list of resolution settings, the contrast setting AUTO will appear next to each resolution setting. The second time you move through the list, the contrast setting DARK will appear.

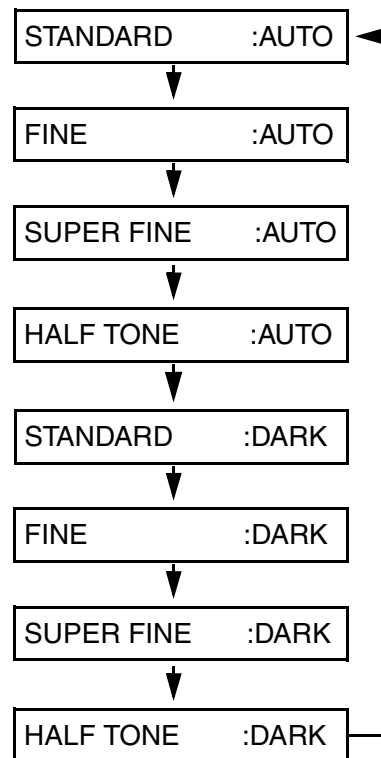

3. Sending Documents

Note: In order to transmit in SUPER FINE resolution, the receiving fax machine must also have that resolution. If it doesn't, your machine will automatically step down to the next best available setting.



Adjusting the Resolution and Contrast

Changing the default resolution

If desired, you can change the default resolution for faxing documents to FINE. Follow the steps below.

- 1** Press these keys:

FUNCTION

4

#

The display will show:

FINE PRIORITY

- 2** Press **1** (YES) to set the default resolution to FINE, or **2** (NO) to set it to STANDARD.

YES

1

 
or

NO

2

- 3** Press the **STOP** key to return to the date and time display.

STOP



Sending a Fax by Normal Dialing

Sending a Fax by Normal Dialing

With Normal Dialing, you pick up the handset (or press the **SPEAKER** key) and dial by pressing the number keys.

- ◆ If a person answers, you can talk with them through the handset before sending the fax. (If you pressed the **SPEAKER** key, you must pick up the handset to talk.)
- ◆ Normal Dialing allows you to listen to the line and make sure the other fax machine is responding.



3. Sending Documents

1 Load the document(s).

The display will show:

READY TO SEND

- Set the resolution and/or contrast if desired.

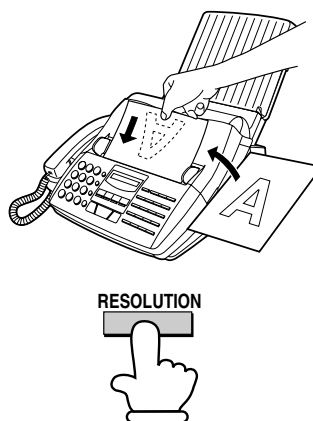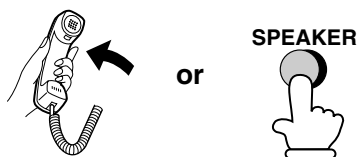**2** Pick up the handset or press the **SPEAKER** key. Listen for the dial tone.


Sending a Fax by Normal Dialing

-
- 3** Dial the number of the receiving machine by pressing the number keys.

2 3 2 4 5 6 7
(Example)

-
- 4** Wait for the connection. Depending on the setting of the receiving machine, you will either hear a facsimile reception tone or the other person will answer.

- If the other party answers, ask them to press their **Start** key (if you pressed the **SPEAKER** key, pick up the handset to speak with them). This causes the receiving machine to issue a reception tone.

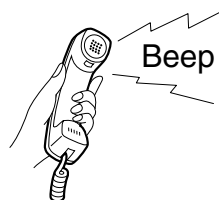

-
- 5** When you hear the reception tone, press the **START** key. Replace the handset if you used it.



- When transmission is completed, the fax will beep once.

Using the **REDIAL** key

You can press the **REDIAL** key to redial the last number dialed. To send a document, press the **START** key when you hear the fax tone after the connection is established. Note that the speaker is automatically activated when you press the **REDIAL** key.

 
Sending a Fax by Automatic Dialing

Sending a Fax by Automatic Dialing

You can dial a fax or telephone number by simply pressing a Rapid Key, or by pressing the **SPEED DIAL** key and entering a two-digit number.

- ◆ To use Automatic Dialing, you must first store the full fax or telephone number in your fax machine.
- ◆ When you store a fax or telephone number, you select a two-digit Speed Dial number for it. 99 Speed Dial numbers are available.

Speed Dial numbers 01 through 36 are for Rapid Key (one-touch) Dialing.



Speed Dial numbers 37 through 99 are for dialing with the **SPEED DIAL** key.


SPEED DIAL



0 6



SPEED DIAL key

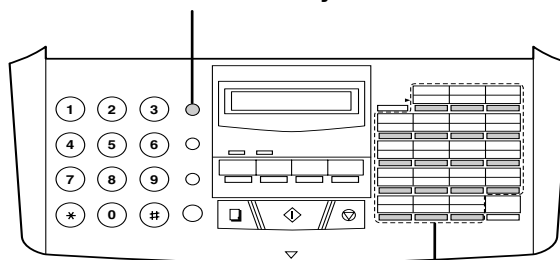

Rapid Keys

Attach the strip of Rapid Key labels above the Rapid Keys.



When you store a number in a Rapid Key, write the name of the party on the label.

Sending a Fax by Automatic Dialing

Storing fax and telephone numbers for Automatic Dialing

- 1** Press these keys:

FUNCTION



The display will alternately show:

FAX/TEL # MODE



1=SET,2=CLEAR

- 2** Press the **1** key to select SET.



The display will alternately show:

FAX/TEL # SET



ENTER SPEED #

- 3** Enter a two-digit Speed Dial number by pressing the number keys (01 to 36 for Rapid Key Dialing, 37 to 99 for Speed Dialing).



(Example)

- 4** Enter the fax or voice number by pressing the number keys.
(Note: A space cannot be entered.)



(Example)

- To clear a mistake, press the **SPEED DIAL** key.
- ♦ If a pause is required between any of the digits to access a special service or an outside line, press the **REDIAL** key (two seconds per pause). The pause will appear as a hyphen. Several pauses can be entered in a row.

Sending a Fax by Automatic Dialing

- 5** Press the **START** key.



- 6** Enter the name of the party by pressing the number keys as shown below. (If you don't want to enter a name, go directly to Step 7.)


SPACE = 1 1	J = 5 5	T = 8 8
A = 2 2	K = 5 5 5	U = 8 8 8
B = 2 2 2	L = 5 5 5 5	V = 8 8 8 8
C = 2 2 2 2	M = 6 6	W = 9 9
D = 3 3	N = 6 6 6	X = 9 9 9
E = 3 3 3	O = 6 6 6 6	Y = 9 9 9 9
F = 3 3 3 3	P = 7 7	Z = 9 9 9 9 9
G = 4 4	Q = 7 7 7	
H = 4 4 4	R = 7 7 7 7	
I = 4 4 4 4	S = 7 7 7 7 7	

3. Sending Documents

Example: SHARP = 77777 444 22 7777  77

- ◆ To clear a mistake, press the **SPEED DIAL** key.
- ◆ To enter two letters in succession that require the same key, press the **SPEAKER** key after entering the first letter.

 - 7** Press the **START** key.



- 8** Return to Step 3 to store another number, or press the **STOP** key to return to the date and time display.

Step 3 or




Sending a Fax by Automatic Dialing

Clearing auto-dial numbers

- 1** Press these keys:

The display will show:

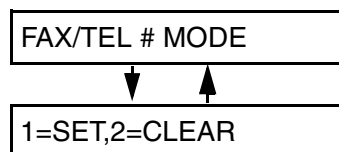


FUNCTION




- 2** Press **2** to select CLEAR.



 - 3** Enter the Speed Dial number that you want to clear by pressing the number keys.



- 4** Press the **START** key.

 

- 5** Return to Step 3 to clear another number, or press the **STOP** key to return to the date and time display.

Step 3 or



Making changes

To make changes in a number previously stored, repeat the programming procedure. Select the Rapid Key or Speed Dial number for which you want to make changes in Step 3, and then change the number and/or name when they appear in the display in Steps 4 and 6.

Note: The fax machine uses a lithium battery to keep automatic dialing numbers and other programmed data in memory when the power is turned off. Battery power is consumed primarily when the power is off. With the power kept continuously off, the life of the battery is about 5 years. If the battery dies, have your dealer or retailer replace it. Do not try to replace it yourself.

Sending a Fax by Automatic Dialing

Storing numbers in Group Keys

Group Keys allow you to dial a group of fax numbers by simply pressing the appropriate Group Key once. To store a group of numbers in a Group Key, follow the steps below.

- ◆ Rapid Key that is not already programmed as a Rapid Key or a Program Key can be used as a Group Key.
- ◆ Up to 20 numbers can be stored in one Group Key.
- ◆ Only Rapid Key and Speed Dial numbers can be stored in a Group Key. Full numbers cannot be stored.

 
- 1** Press these keys.




The display will show:

GROUP ENTRY MODE


- 2** Press **1** (SET) to program a Group Key, or **2** (CLEAR) to clear a Group Key.




- 3** Press a Group Key (Rapid Key 17/G1 or 18/G2) to select it. If you are clearing a Group Key, press it and go to Step 5.

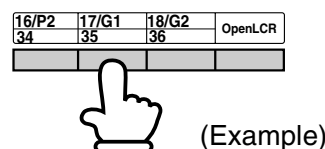

 - 4** Enter the Rapid Key or Speed Dial numbers of the receiving machines.



- 5** Press the **START** key. Return to Step 3 to program another Group Key, or press the **STOP** key repeatedly until you return to the date and time display

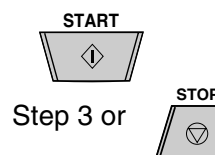

Sending a Fax by Automatic Dialing

Rapid Key Dialing


If the number you want to dial has been stored for Automatic Dialing as a Speed Dial number from 01 to 36, you can dial it by pressing the corresponding Rapid Key.

1 Load the document(s).

The display will show:

READY TO SEND

- Set the resolution and/or contrast if desired.

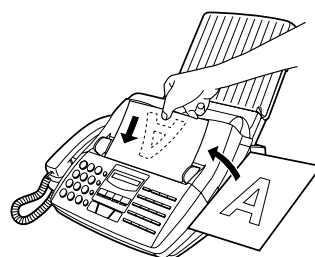

RESOLUTION



2 Press the Rapid Key corresponding to the desired Speed Dial number.

- The name of the receiving party will appear in the display. If no name was stored, the fax number will appear. (If the name or number is incorrect, press the **STOP** key.)
- If the Speed Dial number is from 19 to 36, press the **SHIFT** key and then press the Rapid key.
- The document will be automatically transmitted once the connection is established.

	01	02	03
	19	20	21
04	05	06	07
22	23	24	25

Example: To dial Speed Dial number 02, press Rapid Key 02/20.

SHIFT			
	01	02	03
	19	20	21
SHIFT	04	05	06
	22	23	24
			07
			25

Example: To dial Speed Dial number 20, press the **SHIFT** key and press Rapid Key 02/20.

Sending a Fax by Automatic Dialing

Speed Dialing


Speed Dialing can be used to dial any number that has been stored for Automatic Dialing.

1 Load the document(s).

The display will show:

READY TO SEND


- Set the resolution and/or contrast if desired.

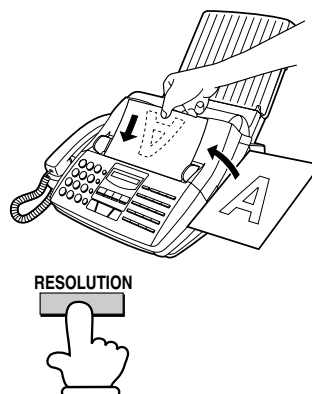

3. Sending Documents

2 Press the **SPEED DIAL** key and then enter the Speed Dial number by pressing the numeric keys.

 - To enter numbers 1 through 9, first enter 0 and then the number.



(Example)

3 Check the display. If the name or number shown is correct, press the **START** key. (If not, press the **STOP** key and then repeat Step 2.)

Sending a Fax by Automatic Dialing

Direct Keypad Dialing


You can also enter a full number with the number keys and then press the **START** key to begin dialing. You can use this method to dial a full number when you don't need to speak to the other party before faxing.

1 Load the document(s).

The display will show:

READY TO SEND

- Set the resolution and/or contrast if desired.

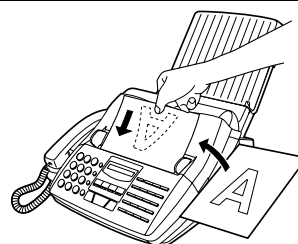

RESOLUTION



 
2 Enter the number of the receiving machine by pressing the numeric keys.

2 3 2 4 5 6 7

(Example)

- If a pause is required between any of the digits to access a special service or an outside line, press the **REDIAL** key (two seconds per pause). The pause will appear as a hyphen. Several pauses can be entered in a row.

3 Check the display. If the number of the receiving machine shown is correct, press the **START** key.



- If it is not correct, press the **STOP** key to backspace and clear one digit at a time, and then re-enter the correct digit(s).

Sending a Fax by Automatic Dialing

Searching for an auto-dial number


If you don't remember the Rapid Key or Speed Dial number in which you have programmed a particular fax number, you can search for the number by following the steps below. Once you have found the number, you can dial and transmit the loaded document by simply pressing the **START** key.

1 Load the document(s).

The display will show:

READY TO SEND

- Set the resolution and/or contrast if desired.

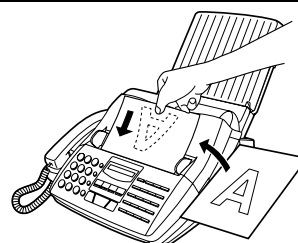


3. Sending Documents

2 Press the **HOLD/SEARCH** key and then the **1** key.




3 Enter the first letter of the stored name by pressing the appropriate number key (the key below the marked letter) one or more times until the letter appears in the display. If the name begins with a special character or number, press **1**.

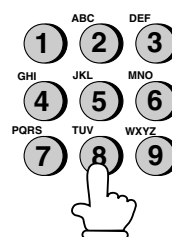

- ◆ If you don't remember the first letter, go to Step 4 (you will scroll through the list from the beginning).
- ◆ If a name wasn't stored for the number, press **0**. This will cause numbers, not names, to appear when you scroll.

Sending a Fax by Automatic Dialing

 - 4** Press the **#** key or the ***** key to scroll through the names (numbers if you pressed **0**). Stop when the desired name appears in the display.



- If no names have been stored that begin with the entered letter, you will scroll from the next name, in alphabetical order, in the list. If no names/numbers have been stored at all, NO DATA will appear.

- 5** Press the **START** key. The document will be automatically transmitted once the connection is established.



Automatic redialing

 
If you use automatic dialing (including Direct Keypad Dialing) and the line is busy, the fax machine will automatically redial the number. The fax machine will make up to two redialing attempts at an interval of five minutes.

- ◆ To stop automatic redialing, press the **STOP** key.

Recall Interval for automatic redialing

If desired, you can change the interval at which the fax machine makes automatic redialing attempts.

- 1** Press these keys:



The display will show:

RECALL INTERVAL

Sending a Fax by Automatic Dialing

- 2** Enter a 2-digit number from **01** to **15** for the number of minutes in the interval.

0 **3**

Example:
3 minutes

- 3** Press the **STOP** key to return to the date and time display.



3. Sending Documents

Recall times for automatic dialing

If desired, you can change the maximum number of automatic redialing attempts made when the line is busy.

- ◆ Under certain conditions (for example if a person answers the call on a telephone), automatic redialing may stop before the set number of redialing attempts are made.

- 1** Press these keys:

FUNCTION

4 → **#** **#** **#** **#**

The display will show:

RECALL TIMES

- 2** Enter a 2-digit number from **00** to **10** for the maximum number of redial attempts.

0 **5**

Example:
5 attempts

- 3** Press the **STOP** key to return to the date and time display.



Sending a Fax by Automatic Dialing

Error Correction Mode

The fax machine is set to automatically correct any distortions in a transmission due to noise on the telephone line before printing at the receiving end. This function is called Error Correction Mode (ECM). ECM is effective for both transmissions and receptions, and is only effective when the other fax machine has ECM as well.

If desired, you can turn ECM off. This will increase slightly the amount of memory available for memory transmission and reception.

-
- 1** Press these keys:

 


The display will show:

ECM MODE

-
- 2** Press **1** to turn on ECM or **2** to turn it off.

YES NO




-
- 3** Press the **STOP** key to return to the date and time display.




4. Receiving Documents

Using FAX Mode

To select FAX mode, press the **RECEPTION MODE** key until the arrow in the display points to FAX.

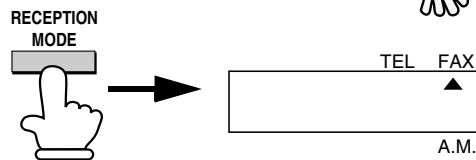

When the reception mode is set to FAX, the fax machine will automatically answer all calls on four rings and receive incoming faxes.

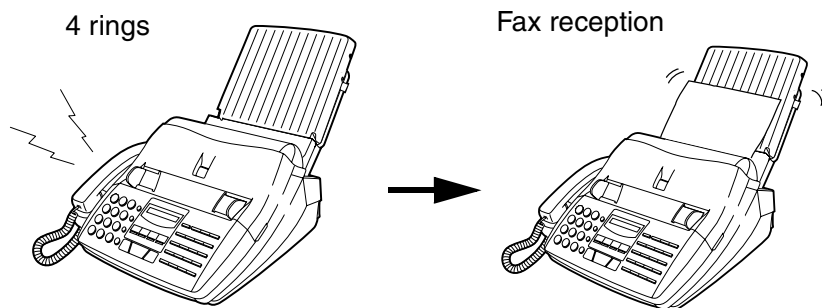

- ◆ If you pick up the handset before the machine answers, you can talk to the other party and/or receive a document as explained in *Using TEL mode* on page 69.

Using FAX Mode


Changing the number of rings

If desired, you can change the number of rings on which the fax machine answers incoming calls in FAX mode. Any number from 2 to 5 can be selected.

- 1** Press these keys:



The display will show:

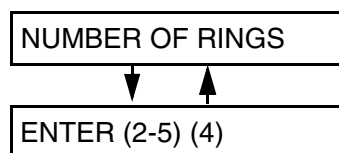

- 2** Enter the desired number of rings (any number from **2** to **5**).

3

The display will show:

Example: 3 rings



- 3** Press the **STOP** key to return to the date and time display.




Note: If you are using Distinctive Ring, the fax machine will answer calls after two rings regardless of the above setting.

Using TEL Mode

Using TEL Mode

To select TEL mode, press the **RECEPTION MODE** key until the arrow in the display points to TEL.

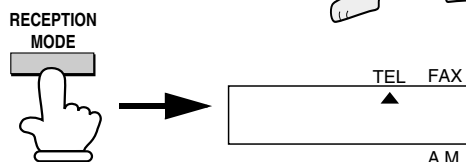


When the reception mode is set to TEL, you must answer all calls by picking up the fax machine's handset or an extension phone connected to the same line.


4. Receiving Documents

Answering with the fax's handset

- 1** When the fax machine rings, pick up the handset.

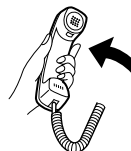

- 2** If you hear a fax tone, wait until the display shows RECEIVING and then replace the handset.

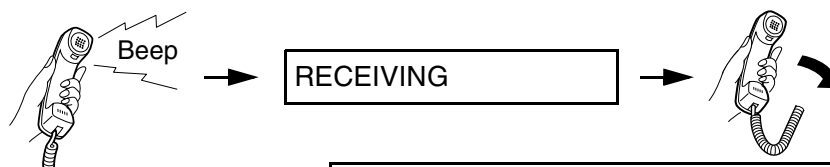


Note: If you have set the Fax Signal Receive setting to NO, press the **START** key to begin reception.

Using TEL Mode


- 3** If the other party first speaks with you and then wants to send a fax, press the **START** key after speaking. (Press your **START** key before the sender presses their Start key.)

- When RECEIVING appears in the display, hang up.

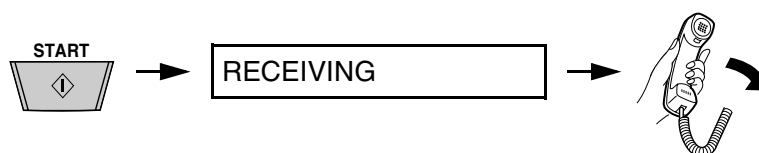


Answering with an extension phone

- 1** Answer the extension phone when it rings.

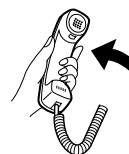


- 2** If you hear a soft fax tone, wait until your fax responds (the extension phone will go dead if it is connected to your fax, or you will hear pronounced, high-pitched tones if the phone is connected to a separate wall jack), then hang up.

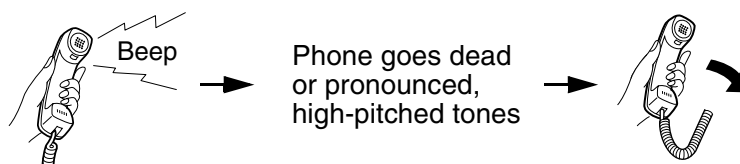

Optional Reception Settings

- 3** If the fax doesn't respond, or if the other party first talks to you and then wants to send a fax, press **5**, *****, and ***** on the extension phone (only on a tone dial phone). This signals the fax to begin reception. Hang up.

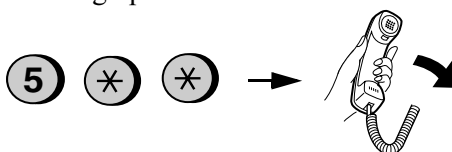

Comments:

- ◆ Your fax will not accept the signal to begin reception (**5****) if a document is loaded in its feeder.
- ◆ If you have set the Fax Signal Receive setting to NO, press **5**, *****, and ***** on the extension phone to begin reception.

 
4. Receiving Documents

Optional Reception Settings

Changing the number for remote fax activation

If desired, you can use a number other than **5** to activate fax reception from an extension telephone. You can select any number from **0** to **9**.

- 1** Press these keys:



The display will show:

TEL/FAX REMOTE #

- 2** Press a number from **0** to **9**.

1
(Example)

Optional Reception Settings

- 3** Press the **STOP** key to return to the date and time display.



Turning off detection of the Tel/Fax Remote Number

If you don't intend to ever activate fax reception from an extension phone, you can turn off detection of the above Tel/Fax Remote Number. This will ensure that the fax never mistakenly attempts to begin reception if it detects a signal similar to the Tel/Fax Remote Number while you are talking on an extension phone.

- 1** Press these keys:



4



The display will show:

REMOTE RECEPTION

- 2** Press **1** to turn on detection of the TEL/FAX REMOTE NUMBER, or **2** to turn it off.

YES

NO

1

or

2







- 3** Press the **STOP** key to return to the date and time display.





Optional Reception Settings

Fax Signal Receive

Your fax will automatically begin reception if you hear a soft fax tone after answering a call on your fax or an extension phone. If you use a computer fax modem to send documents on the same line, you must turn this function off in order to prevent your fax from mistakenly attempting to receive documents from the computer fax modem. Follow the steps below to change the setting.






- 1** Press these keys:  **4** →    
The display will show:


- 2** Press **1** to turn on the function, or **2** to turn it off. YES NO
 or 

- 3** Press the **STOP** key to return to the date and time display.

**2 in 1 Print**

To save paper, you can have the size of your incoming faxes reduced by 55%. This will allow you to receive, for example, a 2-page document on one page (note that this may not be possible if the document pages are longer than your printing paper). To turn on this function, follow the steps below.

- 1** Press these keys:  **6** →   
The display will show:


Optional Reception Settings

- 2** Press **1** to turn on the 2 IN 1 function, or **2** to turn it off.
- YES **1** or NO **2**

- 3** Press the **STOP** key to return to the date and time display.



Reception Ratio

The fax has been set at the factory to automatically reduce the size of received documents to fit the size of the printing paper. This ensures that data on the edges of the document are not cut off. If desired, you can turn this function off and have received documents printed at full size.

- ◆ If a document is too long to fit on the printing paper, the remainder will be printed on a second page. In this case, the cut-off point may occur in the middle of a line.
- ◆ Automatic reduction may not be possible if the received document is too large, contains too many fine graphics or images, or is sent at high resolution. In this case, the remainder of the document will be printed on a second page.

- 1** Press these keys:



The display will show:

RECEPTION RATIO

- 2** Press **1** to turn automatic reduction on, or **2** to turn it off.
- AUTO **1** or 100% **2**

- If you selected AUTO, go to Step 3.
- If you selected 100%, go to Step 4

Substitute Reception to Memory

- 3** If you selected AUTO, select the reception ratio to be used in the event that the memory becomes full (automatic reduction is not possible when the memory is full). Press **1** for 93% or **2** for 100% .

93% 100%
1 or **2**

- 4** Press the **STOP** key to return to the date and time display.

**Substitute Reception to Memory**

In situations where printing is not possible, such as when your fax runs out of paper, the imaging film needs replacement, or the paper jams, incoming faxes will be received to memory.

When you have received a document in memory, FAX RX IN MEMORY will appear in the display, alternating with OUT OF PAPER, FILM END, or PAPER JAM. After you add paper, replace the imaging film, or clear the jam, press **START** key to print out the document.

- ◆ If you received documents in memory because the fax ran out of paper, be sure to add paper which is the same size as the paper previously used. If not, the document print-out size may not match the size of the printing paper.

Caution!

- ◆ When documents are stored in memory, do not turn the power off. This will erase all of the contents.
- ◆ If documents received in memory are lost due to a power failure or other interruption in the power supply, a CLEAR REPORT will be printed out when the power is restored. This gives information about the receptions lost, including the fax numbers of the transmitting machines if they are available.

4. Receiving Documents

5. Making Copies


- ◆ Your fax machine can also be used to make copies. Single and multiple copies (up to 99 per original) can be made, enabling your fax to double as a convenience office copier.

- 1 Load the document(s) face down.
(Maximum of 20 pages.)

The display will show:

READY TO SEND

- Set the resolution and/or contrast if desired. (The default setting for copying is SUPER FINE.).

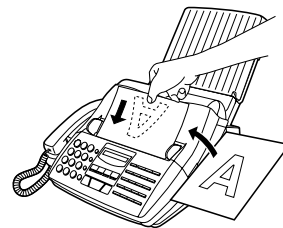

- 2 Press the **COPY/HELP** key.


The display will show:

COPY MODE

1: MULTI COPY

2: SORT COPY

START: COPY

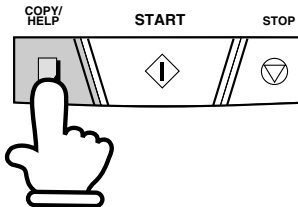

- ◆ If you are only making one copy of the original (or of each original) and don't want to make a reduction or enlargement setting, press the **START** key twice. Copying will begin.


- ◆ If you are only making one copy of the original (or of each original) and want to make an enlargement or reduction setting, press the **START** key and go to Step 5.

Making Copies

- 3** Press **1** (MULTI COPY) if you do not want the copies sorted. Press **2** (SORT COPY) if you want the copies sorted.

MULTI SORT
1 or **2**

Example of three
copies each of three
originals

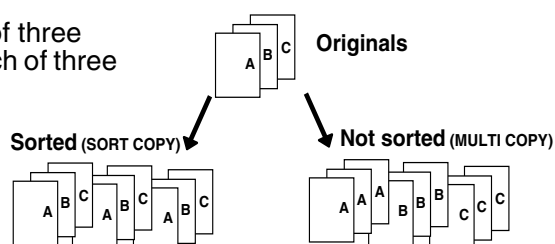

The display will show:

ENTER # (01-99)

- 4** If you are making one copy per original, press the **START** key. If you are making multiple copies per original, enter the number of copies per original (if the number is less than 10, enter a "0" before the number).

0 **9**
 Example: Nine
copies per original

The display will show:

COPY RATIO

- 5** Set the amount of reduction or enlargement by entering a number from **1** to **5** as shown below (or press the **START** key to automatically select 100%). Copying will begin.

1: AUTO (automatic size adjustment to match the size of the printing paper)
2: 50%
3: 100% (no reduction or enlargement)
4: 125%
5: 135%

2

Example: 50%

Making Copies

Note: If you place a large number of originals in the feeder, the memory may become full before all of them can be scanned (MEMORY IS FULL will appear in the display). If this happens, press the **START** key to copy the originals which have been scanned, and then repeat the copy procedure for the remaining originals, including the original which was being scanned when the memory became full.

Copy Cut-off

When making a copy of a document that is longer than the printing paper, use the copy cut-off setting to select whether the remaining part of the document will be cut off or printed on a second page. The initial setting is YES (cut off the remainder). To change the setting, follow the steps below.

- 1** Press these keys:

FUNCTION

6

The display will show:

COPY CUT-OFF

- 2** Press **1** to set copy cut-off to YES (the remaining part of the document will not be printed), or **2** to set copy cut-off to NO (the remaining part will be printed on a second page).

YES

NO

1

or

2

The display will show:

INITIALIZE FILM

- 3** Press the **STOP** key to return to the date and time display.

STOP




6. Making Telephone Calls

Your fax machine can be used like a regular telephone to make and receive voice calls.


- ◆ To make or receive a voice call, the power must be on.

- 1** Pick up the handset or press the **SPEAKER** key. Listen for the dial tone.

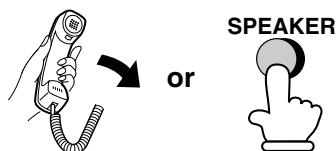

- 2** Dial the number using one of the following methods:

- **Normal Dialing:** Enter the full telephone number with the numeric keys.
- **Rapid Key Dialing:** Press the appropriate Rapid Key.
- **Speed Dialing:** Press the **SPEED DIAL** key, and enter the 2-digit Speed Dial number with the numeric keys.

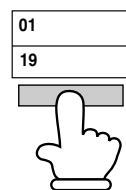

Example: Press Rapid Key 01

- 3** Speak with the other party when they answer.
 - If you pressed the **SPEAKER** key, pick up the handset to talk.



Making Telephone Calls

Comments:

- ◆ While the handset of the fax is lifted (off hook), an extension phone connected directly to the fax cannot be used to speak with the other party.
- ◆ The fax may interrupt a voice call received on an extension phone if the reception mode is set to A.M. and there is a period of silence during the conversation. If you are on a touch-tone phone, you can prevent this by pressing any three keys on the phone immediately after you answer. (Note: Do not enter the code to activate fax reception: 5, *, *.)

Searching for an auto-dial number

 
You can use the **HOLD/SEARCH** key to search for a Rapid Key or Speed Dial number. First search for the number as described in *Searching for an auto-dial number* on page 63, then pick up the handset or press the **SPEAKER** key. The number will be dialed automatically (do not press the **START** key).

Redial

The last number dialed can be redialed by pressing the **REDIAL** key (it is not necessary to pick up the handset or press the **SPEAKER** key). When the other party answers, pick up the handset to talk.

Hold

You can put the other party on hold during a conversation by pressing the **HOLD/SEARCH** key. When this is done, they cannot hear you. You can put the handset back in the cradle without breaking the connection. When you are ready to speak with them again, pick up the handset. If you did not put the handset back in the cradle, press the **HOLD/SEARCH** key again to resume conversation.




7. Answering Machine Hookup

Connecting an Answering Machine


If desired, you can connect an answering machine to your fax machine's **TEL. SET** jack. This will allow you to receive both voice messages and faxes when you are out.

- 1** Remove the seal covering the **TEL. SET** jack.

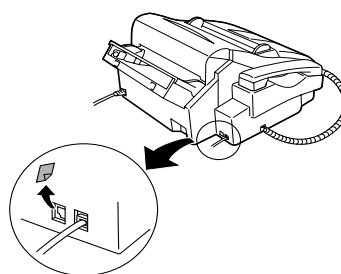

- 2** Connect the answering machine's telephone line jack to the **TEL. SET** jack.

- If desired, you can connect an extension phone to your answering machine's extension phone jack.

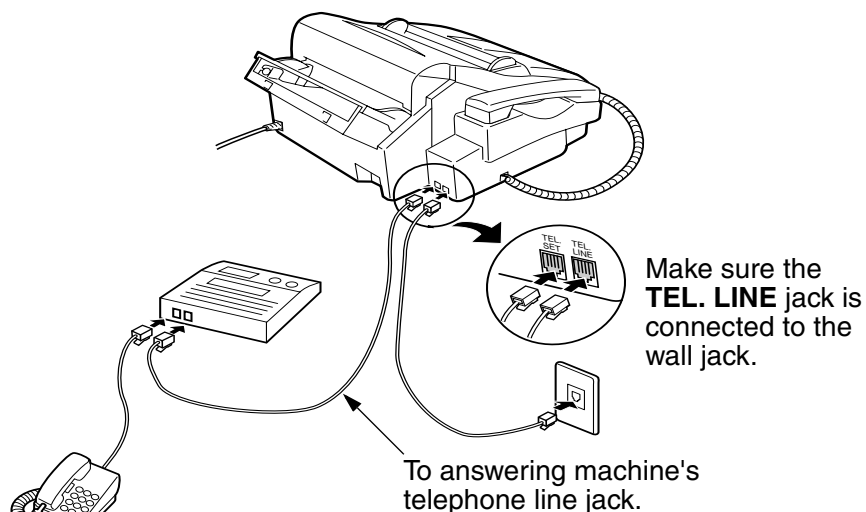

7. Answering Machine

Connecting an Answering Machine

Changing the outgoing message

The outgoing message (OGM) of your answering machine should be changed to inform callers who want to send a fax to press their Start key. For example, your message might go as follows:


"Hello. You've reached the ABC company. No one is available to take your call right now. Please leave a message after the beep or press your facsimile Start key to send a fax. Thank you for calling."

- ◆ Try to keep the length of the message under 10 seconds. If it is too long, you may have difficulty receiving faxes sent by automatic dialing.
- ◆ If your outgoing message must be longer than 10 seconds, leave a pause of about four seconds at the beginning of the message. This will give your fax a chance to detect fax tones sent when automatic dialing is used.

Activating the answering machine connection

Before you go out, activate the answering machine connection as follows:

- 1** Set the reception mode to A.M.

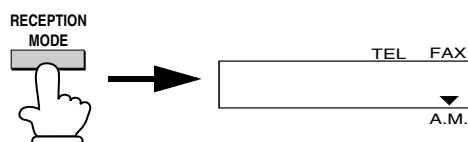

- 2** Set your answering machine to auto answer.

- ◆ Your answering machine must be set to answer on a maximum of two rings. If not, you may not be able to receive faxes sent by automatic dialing.
- ◆ If your answering machine has a toll saver function, make sure that it will answer by the fourth ring.

Connecting an Answering Machine

Note:


If your answering machine has a remote retrieval function, make sure the code used to activate remote retrieval is different from the code used to activate fax reception with an extension telephone (see page 71). If they are the same, entering the code from an outside telephone to retrieve messages will cause the fax machine to be activated

How the connection operates

While you are out, all of your incoming calls will be answered by your answering machine and its outgoing message will play. Voice callers can leave a message. During this time, your fax will quietly monitor the line. If your fax detects a fax tone or a duration of silence greater than four seconds, it will take over the line and begin reception.

Your fax machine listens for a duration of silence because some transmitting machines do not send a fax tone when the fax is sent manually (this means that the person faxing uses the handset to dial and then presses their Start key after listening to your outgoing message). Pressing the Start key in this case causes the line to go silent.

When you return and turn off your answering machine, be sure to change the reception mode back to FAX or TEL!

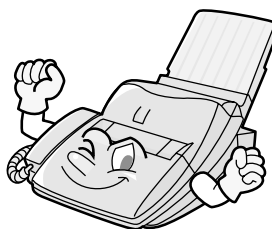

7. Answering Machine

Optional A.M. Mode Settings

Optional A.M. Mode Settings

If necessary, you can use the following settings to improve the response of the answering machine hookup to incoming calls.

Quiet Detect Time

The fax machine is set to take over the line and begin reception if it detects 4 seconds of silence after the answering machine answers. If needed, you can change this setting to any number of seconds from 1 to 10.

- ◆ We recommend that you do not set Quiet Detect Time under 3 seconds. If the fax machine is interrupting callers before they can leave a message, try a longer Quiet Detect Time setting. If your outgoing message includes a period of silence, make sure that the setting is longer than that period of silence, or re-record your outgoing message to shorten the silence.

Note: Quiet Detect Time can be turned off by entering "00" for the time. Note, however, that the fax machine may not be able to receive manually-sent faxes from some older fax machines.


- 1** Press these keys:



The display will show:

OPTION SETTING

- 2** Press these keys:

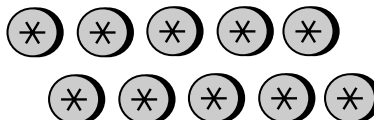

The display will show:

QUIET DETECT TM.

- 3** Enter a number from **01** to **10**, or enter **00** to turn off the function.



- 4** Press the **STOP** key to return to the date and time display.



Optional A.M. Mode Settings

Fax when Answering machine Fails

When this function is turned on, your fax will answer the call after 5 rings if the answering machine for some reason fails to answer before that time. This ensures that you will receive fax messages even if the answering machine's tape fills up or the answering machine is not turned on.

This function has been turned off at the factory. If you want to turn it on, follow the steps below:

Note: When this function is turned on, make sure that the answering machine is set to answer on 4 rings or less. If it isn't, the fax will always answer first, preventing callers from leaving voice messages.

1 Press these keys:

The display will show:

OPTION SETTING


FUNCTION

4

2 Press these keys:

The display will show:

FAX RX TAD FAILS

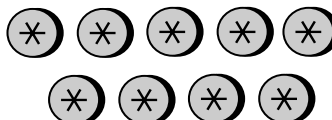**3** Press **1** to turn on the function, or **2** to turn it off.

YES

NO

1

or

2

4 Press the **STOP** key to return to the date and time display.

STOP



7. Answering Machine

8. Special Functions

Caller ID (Requires Subscription to Service)


If you subscribe to a caller identification service from your telephone company, you can set your fax machine to display the name and number of the caller while the fax rings.

Important:

- ◆ To use this function, you must subscribe to a caller identification service from your telephone company.
- ◆ Your fax may not be compatible with some caller identification services.

1 Press these keys:

The display will show:

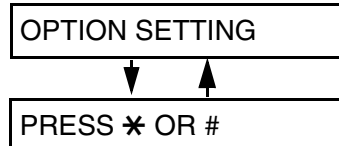


FUNCTION

4

2 Press the * key four times.

The display will show:

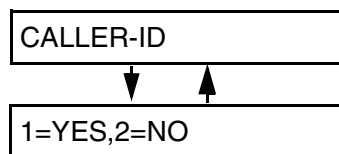


Caller ID

8. Special Functions

- 3** Press **1** to turn on Caller ID, or **2** to turn it off. (If you selected **2** (NO), go to Step 7.)

YES NO
1 or **2**

If you selected **1**, the display will show:

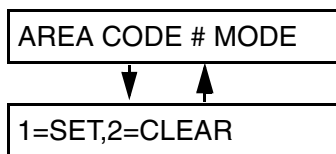

- 4** Press **1** to select SET. (To clear a previously programmed area code, press **2** and go to Step 7.)

1

The display will show:

 
ENTER AREA CODE

- 5** Enter the three digits of your area code.

4 **2** **5**

(Example)

- 6** Press the **START** key to store your area code.



The display will show:

COVER SHEET

- 7** Press the **STOP** key to return to the date and time display.




Caller ID

How Caller ID operates

When you receive a call, the name and phone number of the caller will alternately appear in the display, beginning just before the second ring. The information will continue to be displayed until the line is disconnected.

Note: Some caller ID services may not provide the name of the caller. In this case, only the phone number will appear.

 Display example



Display messages

One of the following messages will appear while the fax rings if caller information is not available.

NO SERVICE	No caller information was received from your telephone company. Make sure that the telephone company has activated your service.
CALLER-ID ERROR	Noise on the telephone line prevented reception of caller information.
OUT OF AREA	The call was made from an area which does not have a caller identification service, or the caller's service is not compatible with that of your local phone company.
PRIVATE CALL	Caller information was not provided by the telephone company at the caller's request.

Viewing the Caller ID list

If you subscribe to a Caller ID service and have turned on the Caller ID function, your fax machine will keep information on the most recent 20 calls and faxes you have received. You can view this information, which consists of the name and number of each caller, in the Caller ID List.

- ◆ After you have received 20 calls, each new call will delete the oldest call.

Follow the steps below to view the Caller ID List in the display. If desired, you can immediately dial a number when it appears.

-
- 1** Press these keys:

HOLD/
SEARCH

2

The display will show:

REVIEWING CALLS

-
- 2** Press the * key to scroll through the list from the most recent call, or the # key to scroll through the list from the oldest call.


*

or

#


-
- 3** If you want to dial one of the numbers in the list, scroll through the list until the number appears in the display.

- If you want to send a fax, load the document and then press the **START** key.

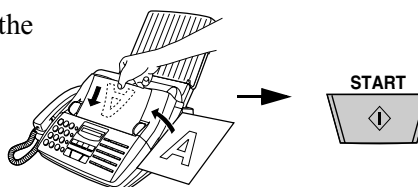

Caller ID

- If you want to make a voice call, pick up the handset or press the **SPEAKER** key. Dialing will begin automatically. (If you pressed the **SPEAKER** key, pick up the handset when the other party answers.)

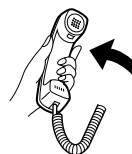

-
- 4** Press the **STOP** key when you have finished viewing the list.



To delete calls from the Caller ID list

If you want to delete a single call from the caller list, press the **0** key while the call appears in the display. If you want to delete all calls from the list, hold the **0** key down for at least 3 seconds while you are viewing any number in the list.

Priority Call

If desired, you can set your fax to make a special ringing sound when you receive a call from a designated phone number. This lets you know immediately who is calling without having to look at the display.

To use this function, enter the desired phone number by following the steps below (only one phone number can be entered).

-
- 1** Press these keys:

FUNCTION





The display will show:

PRIORITY CALL #











Caller ID

8. Special
Functions

- 2** Press **1** to enter a number, or **2** to clear a number. (If you pressed **2**, go to Step 4.)

SET CLEAR
 or 

- 3** Enter the phone number, including the area code, by pressing the number keys (max. of 20 digits).

         
 (Example)

- 4** Press the **START** key and then the **STOP** key.



Blocking voice calls

With Caller ID turned on, you can use the Anti Junk Fax function described in *Blocking Reception of Unwanted Faxes* in this chapter to block voice calls as well as fax receptions (the Anti Junk Fax function normally only blocks faxes).

In this case, when a voice call or a fax transmission comes in from a number you have specified as a "Junk Number", your fax will break the connection as soon as it receives the calling phone number from the caller ID service (before the second ring).

To use this function, turn on the Anti Junk function and then enter the number in the Anti Junk Number List as explained in *Blocking Reception of Unwanted Faxes* in this chapter (see page 101).

Note: This function cannot be used if you are using the Distinctive Ring function.

Distinctive Ring

Distinctive Ring (Requires Subscription to Service)

Important:

- ◆ **To use distinctive ring, you must subscribe to a distinctive ring service from your local phone company.**
- ◆ Your fax machine may not be compatible with some distinctive ring services.

Distinctive ring is a service offered by some local telephone companies whereby they assign an additional second number to your regular single line. The second number rings differently from your normal number.

If you subscribe to a distinctive ring service, you can set the fax machine to automatically answer when your second number is called. This allows you to use the second number as an exclusive fax number.

Note: If you are using an answering machine with your distinctive ring service, the answering machine must be connected to a separate wall jack. Do not connect it directly to your fax.

To have your fax automatically answer when your second number is called, follow the steps below:

- 1** Press these keys:

The display will show:

OPTION SETTING

 
FUNCTION

4

- 2** Press the * key eight times.

The display will show:

DISTINCTIVE RING



Distinctive Ring

8. Special Functions

- 3** Press a number from **1** to **3** to select the ring pattern below that matches your second number's ring pattern. Or, press **4** to have your fax automatically answer your normal telephone number. Press **5** to turn off the distinctive ring function.

- | | |
|-------------------------|---|
| 1 RING PATTERN 1 | Two short rings |
| 2 RING PATTERN 2 | One short, one long, and one short ring |
| 3 RING PATTERN 3 | Two short rings and one long ring |
| 4 STANDARD RING | Your standard (normal) ring pattern |
| 5 OFF SETTING | Turn distinctive ring off |


The display will show:

FAX SIGNAL RX

- 4** Press the **STOP** key to return to the date and time display.



- 5** Set the reception mode to FAX.

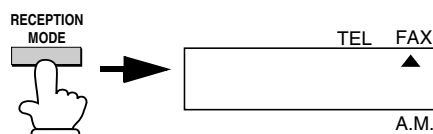

- ◆ When using distinctive ring, you must set the reception mode of your fax machine to FAX. When your designated fax number is dialed, your fax will automatically answer and begin reception after two rings. Note that other devices on the same line will also ring until your fax answers. If one of your other numbers is dialed, the fax will ring; however, it will not answer.

Broadcasting

Broadcasting


This function allows you to send the same document to as many as 20 different locations with just one operation. First store the document in memory, then enter the numbers of the receiving machines. The document will be transmitted to each location.

- ◆ You can only use Rapid Keys or Speed Dial numbers to dial the numbers of the receiving machines.

1 Load the document(s).

The display will show:

READY TO SEND

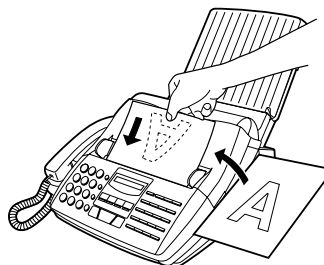


2 Press the **MEMORY** key and then 2.

MEMORY

2

3 Dial the receiving machines (maximum of 20) using one or both of the following methods:

- Enter one or more Speed Dial numbers by pressing the number keys.
- Press one or more Rapid Keys.

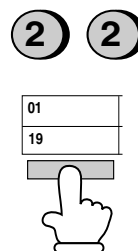

4 Press the **START** key.

- Set the resolution and/or contrast if desired.

START

 
RESOLUTION



Broadcasting

8. Special Functions

- 5** Press the **START** key. Transmission will begin.




- A Transaction Report is automatically printed out after Broadcasting is completed. Check the "Note" column of the report to see if any of the locations are marked "Busy" or have a communication error code. If so, send the document to those locations again.

Broadcasting using a Group Key


If the fax machines to which you want to broadcast have all been programmed into one Group Key, you can perform the broadcasting operation using the following simplified procedure:

- 1** Load the document(s).

- Make any desired transmission settings (resolution, contrast, etc.).

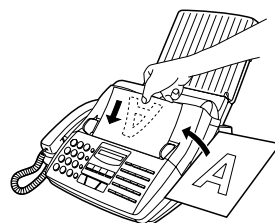

- 2** Press the appropriate Group Key. Transmission will begin.

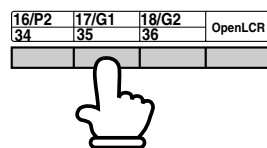

Cover Sheet

Cover Sheet

You can have the fax generate a cover sheet and send it as the last page of each of your fax transmissions.

You can select a message.

URGENT

AUTOMATIC COVER SHEET

DATE : JAN-05-2000 03:39 PM

TO : BBC CORP.

FAX #: 829658742

FROM : ABC CORP.

FAX #: 529658742

2 PAGES WERE SENT

<INCLUDING THIS COVER SHEET>

For the recipient's name to appear, you must dial using a Speed Dial or Rapid Key number with the name programmed.

Your name and number must be programmed as explained on page 22.

Follow the steps below to turn on the cover sheet function. Once the cover sheet function is turned on, cover sheets will be included with all transmissions until you turn it off.

- 1** Press these keys:



The display will show:

OPTION SETTING

- 2** Press these keys:



The display will show:

COVER SHEET

Cover Sheet

8. Special
Functions

- 3** Press **1** (YES) to turn on the cover sheet function, or **2** (NO) to turn it off.

YES NO
1 or **2**

The display will show:

AUTO PRINT OUT


- 4** Press the **STOP** key to return to the date and time display.



Selecting a header message (optional)

When the cover sheet function is turned on, you can also select a message which will appear as a header at the top of the cover sheet. Note that the message selection is only effective for one transmission.

- 1** Load the document(s).
- The document must be loaded before a message can be selected.
 - The cover sheet function must be turned on.

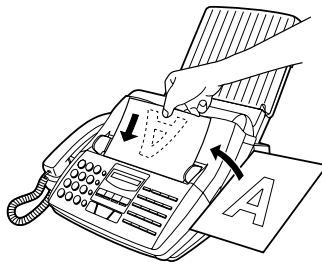

- 2** Press these keys:

The display will show:

FUNCTION **5**

COVER SHEET HEAD



Cover Sheet

-
- 3** Select a message by entering a number from **1** to **4**:

1

 
 
 
 
 
(Example)

- 1:** URGENT
2: IMPORTANT
3: CONFIDENTIAL
4: PLS. DISTRIBUTE

-
- 4** Dial the receiving machine and transmit the document.

Note:

To cancel a cover sheet header setting, press the **STOP** key or remove the document from the feeder.




Batch Page Numbering

You can change the page numbering of the transmitted document from simple numbering ("P.1", "P.2", etc.) to batch numbering, which means that a slash and the total number of pages being sent are added after each page number (for example, "P. 1/5", "P.2/5", etc.). This allows the receiver to check for missing pages.

1 Load the document(s).

- The document must be loaded before batch page numbering can be set.

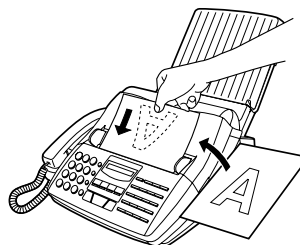

2 Press these keys:

The display will show:

PAGE COUNTER SET

FUNCTION



3 Enter the total number of pages ("01" to "99") by pressing the number keys.

- If you are sending a cover sheet, **do not** include it in the total number of pages (the number will be adjusted automatically).

0 8

Example:
Eight pages

 
 
 
 
 
4 Dial the receiving machine and transmit the document.



Batch Page Numbering

Comments:

- ◆ If you need to cancel a batch number entry, remove the document from the feeder or press the **STOP** key.
- ◆ If the number of pages actually transmitted does not coincide with the batch number entered, the alarm will sound and PAGE COUNT ERROR will appear in the display. PAGE E. will also appear in the NOTE column of the Transaction Report if it has been set to print out.



Blocking Reception of Unwanted Faxes

8. Special Functions

Blocking Reception of Unwanted Faxes

The Anti Junk Fax function allows you to block reception of faxes from parties which you specify. This saves paper by not printing out unwanted "junk" faxes.

To use this function, follow the steps below to turn it on, and then enter the fax numbers from which you do not want to receive faxes as indicated in the procedure that follows.

 
- 1** Press these keys:

The display will show:

JUNK # CHECK

FUNCTION

4



- 2** Press **1** to turn on the Anti Junk function, or **2** to turn it off.

YES

NO

1

or

2

- 3** Press the **STOP** key to return to the date and time display.

STOP

**Entering Anti Junk numbers**

Enter (or clear) a number in the Anti Junk List as shown below. Up to five numbers can be entered.

- ◆ To clear a number from the Anti Junk Number List, you need to know the 1-digit number which identifies it. If you have forgotten this number, print out the Anti Junk Number List as explained on page 123.

Blocking Reception of Unwanted Faxes

1 Press these keys:

The display will show:

STORE JUNK #

FUNCTION

3

*

*

2 Press **1** to enter a number in the Anti Junk Number List, or **2** to clear a number from the list.

SET

CLEAR

1

or

2

3 Entering: Enter a 1-digit number from **1** to **5** with the numeric keys. This number identifies the fax number that you will enter in the next step.

1

(Example)

Clearing: Enter the 1-digit number that identifies the fax number you want to clear, and go to Step 5.

4 Enter the fax number.

2 3 2 4 5 6 7

(Example)

5 Press the **START** key.

START



6 Return to Step 3 to enter (or clear) another fax number, or press the **STOP** key to return to the date and time display.

Step 3 or

STOP



Sending Documents From Memory


With this function, the original document is scanned immediately, stored in memory, and then transmitted once the connection to the receiving machine is made. This is convenient when transmitting to places where the line is often busy, as it saves you from waiting to pick up the original document and frees the feeder for other operations. After transmission, the document will be cleared from memory.

- ◆ Only one memory transmission can be set at a time.
- ◆ The amount of memory currently occupied appears as a percentage in the display while the document is being scanned.

1 Load the document(s).

The display will show:

READY TO SEND

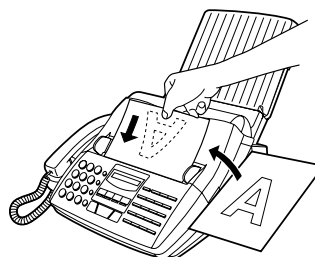

- Set the resolution and/or contrast if desired.



2 Press the **MEMORY** key and then **1**.

The display will show:


ENTER STATION #



Sending Documents From Memory

3 Enter the number of the receiving machine using one of the following methods:

- Press a Rapid Key.
- Press the **SPEED DIAL** key and enter a Speed Dial number.
- Enter a full telephone number by pressing the number keys.

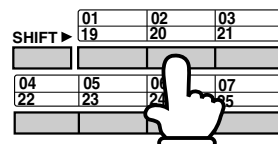

(Example)

4 Press the **START** key if you entered a Speed Dial number or a full number.

- The document will be scanned and stored in memory. Your fax will then dial the receiving machine and transmit the document (redialing will take place automatically if necessary).





 
 
 
 
Sending Documents From Memory

8. Special Functions

If the memory becomes full...

If the memory becomes full while the document is being scanned, MEMORY IS FULL will appear in the display.

- ◆ Press the **START** key if you want to transmit the pages which have been stored up to that point in memory. The remaining pages will be ejected from the feeder. After transmission, the memory will be cleared and you can transmit the remaining pages. You will also need to transmit the page which was being scanned when the memory filled up.
- ◆ Press the **STOP** key if you want to cancel the entire transmission.



Polling (Requesting a Fax Transmission)

Polling (Requesting a Fax Transmission)

Polling allows you to call another fax machine and have it send a document (previously loaded in its feeder) to your machine without operator assistance. In other words, the receiving fax machine, not the transmitting fax machine, initiates the transmission.

 
To use the polling function, you must first set Rapid Key 14/POLL for use as a polling key.

- ◆ When Rapid Key 14/POLL is set as a polling key, it cannot be used for Rapid Key dialling.

-
- 1** Press these keys:

FUNCTION
[]

4



The display will show:

POLLING

-
- 2** Press **1** to turn on the function, or **2** to turn it off.

YES

NO

1

or

2

-
- 3** Press the **STOP** key to return to the date and time display.




Polling (Requesting a Fax Transmission)

8. Special Functions

Requesting transmission


1 Dial the fax machine you want to poll using one of the following methods:

- Pick up the handset (or press the **SPEAKER** key) and press a One Touch Dial key. Wait for the fax answerback tone.
- Pick up the handset (or press the **SPEAKER** key) and dial the full number. Wait for the fax answerback tone.
- Press the **SPEED DIAL** key and enter a 2-digit Speed Dial number.
- Enter the full number using the numeric keys.

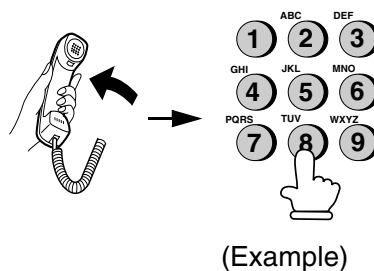

2 Press Rapid Key 14/POLL.

 - If you used the handset, replace it when POLLING appears in the display. Reception will begin.



Polling (Requesting a Fax Transmission)

Being polled (polling standby)

To let another fax machine poll your fax, press the **RECEPTION MODE** key to set the reception mode to FAX and load the document(s).

 
Transmission will take place when the other fax machine calls your machine and activates polling. Automatic reception is possible while your fax is on polling standby.

Polling security

Polling Security allows you to prevent unauthorized polling of your machine. When this function is turned on, polling will only take place when the fax number of the polling fax machine has been entered in your machine's list of permitted fax numbers (called "passcode numbers"). The number of the polling fax must also be correctly programmed into itself for identification.

To use Polling Security, follow the steps below to turn the function on, and then enter permitted numbers as shown on the following page.


- 1** Press these keys:



The display will show:

SECURITY SELECT

 - 2** Press **1** to turn polling security on, or **2** to turn it off.



- 3** Press the **START** key and then the **STOP** key.



Polling (Requesting a Fax Transmission)

Storing and clearing fax numbers for polling permission

You can store up to 10 fax numbers in your machine's list of permitted numbers.

- 1** Press these keys:

FUNCTION

3



#

#

#

#

The display will show:

PASSCODE # MODE

- 2** Press **1** to store a number, or **2** to clear a number.

SET

CLEAR

1

or

2

- 3 Storing:** Enter a 2-digit number from 01 to 10. This number identifies the fax number you will store in the next step.

0

1

(Example)

Clearing: Enter the number which identifies the fax number you want to clear, and go to Step 5.

- 4** Enter the fax number.

2

3

2

4

5

 
6

7

(Example)

- 5** Press the **START** key.

START



- 6** Return to Step 3 to enter (or clear) another number, or press **STOP** to return to the date and time display.

Step 3 or

STOP



Timer Operations

Timer Operations

The Timer function allows you to set a transmission and/or polling operation to be performed automatically at a time you specify. One transmission operation and one polling operation can be set at any one time, and the times they will be performed can be specified up to 24 hours in advance.

- ◆ You can use this function to take advantage of lower off-peak telephone rates without having to be there when the operation is performed.

Note: Only a Speed Dial number can be used to dial the receiving machine.

Setting a timer operation

- 1 Press these keys:

The display will show:

TIMER MODE

FUNCTION

1

- 2 Press # to set a transmission operation (SEND MODE), or * to set a polling operation (POLLING MODE).

POLLING

SEND

*

or

#

- 3 Press 1 to select SET.

1

- 4 Enter the time at which you want the operation to take place (2 digits for the hour and 2 digits for the minute).

0

9

2



5

Example: 9:25

Timer Operations

8. Special Functions

- 5** Press the ***** key to select A.M. or the **#** key to select P.M.



A.M. P.M.
 or 

- 6** Press the **START** key.



- 7** Enter the Speed Dial number of the receiving fax machine.

- If this is a polling operation, go to Step 10.

 
 (Example)

- 8** Press the **START** key.



- 9** Adjust the resolution and/or contrast if desired (skip to the next step if you don't want to change settings).



- 10** Press the **START** key and then the **STOP** key. If this is a transmission operation, load the document in the feeder sometime before the specified time of transmission.



Timer Operations

To cancel a timer operation

If you need to cancel a timer operation after it has been set, follow the steps below.

-
- 1** Press these keys:

The display will show:

TIMER MODE

FUNCTION

1

-
- 2** Press # to cancel a transmission operation, or * to cancel a polling operation.

POLLING

SEND



or



-
- 3** Press 2 to select CLEAR.

2

-
- 4** Press the **START** key and then the **STOP** key.

START

STOP



Entering and Using Programs

If you frequently perform the same operation involving the same party, you can program all the steps of the operation into one Program Key. This allows you to perform the operation by simply pressing that key.

- ◆ Rapid Keys 15/P1 and 16/P2 can be used as Program Keys. However, a key cannot be used if it is already being used for Rapid Key Dialing.
- ◆ Only Speed Dial numbers can be used to enter fax numbers of receiving machines in the Program Keys. Full numbers cannot be entered.
- ◆ If the program is for a regular transmission or polling operation, a timer setting can be included to have the operation performed automatically at a selected time.
- ◆ To clear a mistake, press the **STOP** key.

Initial procedure

To program a Program Key, first perform the following procedure. After you have completed this procedure, go to the procedure for the specific operation you want to program (see the following pages).

- 1** Press these keys:

The display will show:

PRG.ENTRY MODE

FUNCTION



- 2** Press **1** to select SET.



- 3** Select a Program Key ("15/P1" or "16/P2") to select it.


15/P1
33

or

16/P2
34

Entering and Using Programs

- 4** Enter a name for the program by pressing the letter entry keys. (If you don't want to enter a name, go directly to Step 5.)

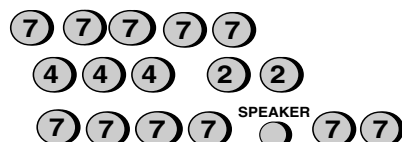


Example: SHARP

- 5** Press the **START** key.



 - 6** Press the ***** key or the **#** key until the desired operation appears in the display.



Transmission (SEND MODE)
Polling
Broadcasting

 
- 7** Press the **START** key and go to the specific procedure for your operation (see the following pages).



Transmission

(Continued from *Initial procedure*.)

- 8** Press "1" if you want the document to be scanned into memory and then transmitted, or "2" if you want the document to be transmitted directly from the feeder. (Note: If you select "2", you can include a timer setting in the program.)



- If you pressed "1", go to Step 12. If you pressed "2" and don't want to make a timer setting, go to Step 11.

Entering and Using Programs

8. Special Functions

- 9** Enter the time at which you want the operation to take place (2 digits for the hour and 2 digits for the minute).

 
0 9 2 5

Example: 9:25

- 10** Press "*" to select A.M., or "#" to select P.M.

* or #

- 11** If you want the document to be sent through memory, press the **START** key.




- 12** Enter the Speed Dial number of the receiving fax machine.

2 5

(Example)

 - 13** Press the **START** key.



- 14** If desired, set the resolution and/or contrast by pressing the **RESOLUTION** key (otherwise, skip this step).

RESOLUTION





- 15** Press the **START** key and then the **STOP** key.





Entering and Using Programs

Polling

 
(Continued from *Initial procedure.*)



-
- 8** Enter the time at which you want the operation to take place (2 digits for the hour and 2 digits for the minute). If you don't want to make a timer setting, go to Step 10.
- 




 Example: 9:25
-

- 9** Press "*" to select A.M., or "#" to select P.M.
-  or 
-

- 10** Press the **START** key.



-
- 11** Enter the Speed Dial number of the receiving fax machine.
- 




 (Example)
-



- 12** Press the **START** key and then the **STOP** key.



Broadcasting

(Continued from *Initial procedure.*)

-
- 8** Enter the Speed Dial numbers of the receiving machines.
- 




 (Example)
-

- 9** Press the **START** key.



Entering and Using Programs

8. Special Functions

- 10** If desired, set the resolution and/or contrast by pressing the **RESOLUTION** key (otherwise, skip this step).

RESOLUTION



- 11** Press the **START** key and then the **STOP** key.

**Clearing a Program Key**

To clear a Program Key, follow these steps:

- 1** Press these keys:

FUNCTION **7** **#**



The display will show:

PRG.ENTRY MODE



- 2** Press **2** to select CLEAR.

2



- 3** Press the Program Key you want to clear.

15/P1
33

(Example)

- 4** Press the **START** key and then the **STOP** key.




Entering and Using Programs


Using a Program Key

A programmed operation is performed as follows:

- 1** Load the document.

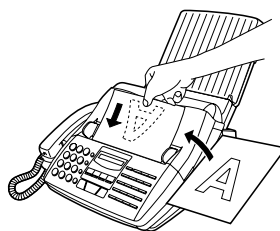

 - 2** Press the appropriate Program Key.




(Example)

Note: A maximum of 2 timer operations can be set at any one time, including both timer operations set by pressing a Program Key and operations set as described in "Timer Operations" in this chapter

To cancel a programmed timer operation

If a Program Key has been pressed for a timer operation and you need to cancel the operation before it is performed, follow these steps:

 - 1** Press the Program Key.



(Example)

- 2** Press the **START** key.



9. Printing Lists

You can print lists showing settings and information entered in the fax machine. You can also print out reports on recent activity and individual operations after they are completed. The lists and reports are described on the following pages.

To print a list, follow the steps below.

9. Printing Lists

- 1 Press the **FUNCTION** key and **2**.



2

The display will show:

LISTING MODE

 
- 2 Press the *** key** or the **# key** until the desired list appears in the display.



or



- 3 Press the **START** key to print the list.



Activity Report

This report shows information on your most recently performed send and receive operations (a combined maximum of 30 operations can appear). The report is divided into two parts: the **TRANSMISSIONS ACTIVITY REPORT**, which shows information on transmissions, and the **RECEPTIONS ACTIVITY REPORT**, which shows information on receptions.

- ◆ All information is erased after a report is printed out. If automatic print-out is turned off and the report is not printed manually for 30 operations, the information on the oldest operation will be overwritten each time a new operation is performed.

Printing Lists

```
*****
*
*               TRANSMISSIONS ACTIVITY REPORT
*
*               FOR: John Doe Corp.           201 555 1234
*
*               JAN-05-2000 03:51 PM
*
*-----*
* NO.  DATE   START   RECEIVER      TX TIME  PAGES  TYPE      NOTE
*-----*
* 1  JAN-05 03:34 PM  N.Y.             41"      1  SEND      OK
* 2  JAN-05 03:35 PM             1'21"     2  BROADCAST
* 3  JAN-05 03:38 PM  JACK SMITH      59"      2  SEND(M)    OK
* 4  JAN-05 03:45 PM  JACK SMITH      40"      1  TIMER SEND  OK
*-----*
*
*               TOTAL          3'41"      6
*
*
*               GRAND TOTAL TIME:          4M 21S
*               PAGES:                    7
*
*****
```

Explanation of headings

SENDER/RECEIVER The name or fax number of the other machine involved in the transaction. If that machine does not have an ID function, the communication mode will appear (for example, "G3").

START The time at which transmission/reception started.

TX/RX TIME Total time taken for transmission/reception.

PAGES Number of pages transmitted/received.

NOTE (One of the following notes will appear under **NOTE** in the report to indicate whether the transaction was successful, and if not, the reason for the failure.)

OK - Transmission/reception was successful.

P.FAIL - A power failure prevented the transaction.

JAM - The printing paper or document jammed, preventing the transaction.

NO PAPER - You ran out of paper during reception.

BUSY - The fax was not sent because the line was busy.

COM.E-0 to COM.E-7 - A telephone line error prevented the transaction. See *Line Error* on page 128.

Printing Lists

CANCEL - The transaction was cancelled because the **STOP** key was pressed, no document was in the feeder, or the other machine requested transmission using a function which your fax machine does not have. If you were attempting to fax, make sure a document is in the feeder. If you were receiving, contact the faxing party to see how they are trying to send to you.

9. Printing Lists

If desired, you can set the Activity Report to automatically print out whenever information on 30 operations has accumulated. (A report can still be printed on demand at any time.) Follow the steps below:

- 1** Press these keys:

The display will show:

FUNCTION

4



*

*

AUTO PRINT OUT

- 2** Press **1** to turn on automatic print-out, or **2** to turn it off.

YES

NO

1

or

2

- 3** Press the **STOP** key to return to the date and time display.

STOP

**Timer List**

This list shows the timer operations that are currently set.

TIMER LIST			
FOR: Johe Doe Corp.		JAN-05-2000 02:46 PM	
		201 555 1234	
<hr/>			
TIMER SEND			
START	05:15 PM		
RECEIVER	N.Y.		
RESOLUTION	FINE	:AUTO	
TIMER POLLING			
START	10:00 AM		
SENDER	JACK SMITH		
<hr/>			

Printing Lists

Telephone Number List

This list shows the fax numbers that have been programmed for automatic dialing.

TELEPHONE NUMBER LIST		
FOR: John Doe Corp.		JAN-05-2000 02:41 PM 201 555 1234
SPEED #	NAME	TELEPHONE #
01	N.Y.	123-785-6340
02	JACK SMITH	125-563-8462
03	ANDERSON	230-347-6385
04	JANE	812-937-0142
05	MACDONALD	370-552-2836

Passcode List

This list shows settings made for polling security, your name and fax/telephone number as entered in the machine, a sample of the header printed at the top of every page you transmit (**HEADER PRINT**), and settings related to OpenLCR.

PASSCODE LIST	
FOR: John Doe Corp.	
JAN-05-2000 11:24 AM	
POLLING MODE	SECURITY OFF
PASSCODE #	01
	02
	03
	04
	05
	06
	07
	08
	09
	10
PRIORITY CALL #	
DAY LIGHT SAVING TIME	NO
SENDER'S NAME	
SENDER'S TELEPHONE NUMBER	
HEADER PRINT	
JAN-05-2000 11:24 AM	P.01
LCR FUNCTION ON/OFF	ON
(#106#/#104#)	
LCR DIAL SELECT	YES
LCR TIME SELECT	02,04 MINUTES
LCR TABLE SELECT	TABLE NOT EXIST
CENTER #	19783772160

Option Setting List

This list shows the current status of the option settings.

OPTIONS SETTING LIST		
FOR: AL		JUN-05-2000 06:02 PM 123 3536
NO.	ITEM	SETTING
1	FINE PRIORITY	NO
2	NUMBER OF RINGS IN AUTO ANSWER MODE	4 RINGS
3	RECALL INTERVAL	05 MINUTES
4	RECALL TIMES	02 TIMES
5	TEL/FAX REMOTE #	(5)**
6	REMOTE RECEPTION	YES
7	TRANSACTION PRINT SELECT	ERROR ONLY
8	DIAL MODE	TO NE
9	QUIET DETECT TIME	04 SECONDS
10	FAX ANSWER WHEN TAD FAILS	NO
11	DISTINCTIVE RINGING	OFF
12	FAX SIGNAL RECEIVE	YES
13	JUNK # CHECK	NO
14	POLLING	NO
15	CALLER-ID	YES
16	COVER SHEET	YES
17	AUTO PRINT OUT	NO
18	ECM MODE	YES

Anti Junk Number List

This list shows the numbers that are blocked by the Anti Junk function.

ANTI JUNK NUMBER LIST	
ANTI JUNK # CHECK : NO	
JAN-05-2000 02:50 PM	
STORED LOCATION	JUNK FAX #
1	2015546621
2	2014573321
3	1023570251

Printing Lists

Program and Group List

The top part of this list shows the programs which have been entered. The bottom part shows the fax numbers which have been stored in each Group Key.

PROGRAM/GROUP LIST			
FOR: Johe Doe Corp.		JAN-05-2000 03:20 PM	
		201 555 1234	
PROGRAM 1	NAME	ABC Corp.	
	RESERVED TIME	03:00 PM	
	TYPE	TIMER POLLING	
	REMOTE STATION ID	S01	
GROUP 1	REMOTE STATION ID	S01-S99	

Caller ID List

This list shows information about your 20 most recent calls. (This list is only available if you are using the Caller ID function.)

CALLER-ID LIST				
AREA CODE: 123		JAN-05-2000 03:20 PM		
FOR: Johe Doe Corp.		201 555 1234		
NO.	DATE	RX TIME	NAME	TELEPHONE # MODE
01	JAN-05	03:10 PM	ANDERSON ALLEN	201-556-8267 FAX
02	JAN-05	03:11 PM	MACDONALD MIKE	102-872-6621 FAX
03	JAN-05	03:11 PM	SMITH SHARON	202-441-3900 A.M.
04	JAN-05	03:12 PM	JONES JENNIFER	963-4451 TEL

Print Setup List

This list shows the current status of the printing settings accessed by pressing the **FUNCTION** key and the **6** key.

PRINT SET UP LIST		
FOR:		JAN-05-2000 09:36 AM
NO.	ITEM	SETTING
1	INITIALIZE FILM	FEB-01-1999
2-1)	RECEPTION RATIO	AUTO
2-2)	PRINTING RATIO IN MEMORY FULL	93%
3	2 IN 1 PRINT	NO
4	PRINT CONTRAST	NORMAL
5	PAPER SIZE SET	LETTER
6	COPY CUT OFF	YES

Transaction Report

This report is printed out automatically after an operation is completed to allow you to check the result. Your fax machine is set at the factory to print out the report only when an error occurs.

- ◆ The same headings appear in the Transaction Report as in the Activity Report. See page 119 for an explanation of the headings.
- ◆ The Transaction report cannot be printed on demand.

If desired, you can change the condition under which a report is printed out. Follow the steps below.

- 1** Press these keys:

FUNCTION

4



#

#

#

#

The display will show:

TRANSACTION LIST

- 2** Press a number from **1** to **5** to select the condition for printing.

- | | | |
|----------|---------------|--|
| 1 | ALWAYS PRINT | A report will be printed after each transmission, reception, or error. |
| 2 | ERR/TIMER/MEM | A report will be printed after an error, timer operation, or memory operation. |
| 3 | SEND ONLY | A report will be printed after each transmission. |
| 4 | NEVER PRINT | A report will never be printed. |
| 5 | ERROR ONLY | A report will be printed only when an error occurs. |

- 3** Press the **STOP** key to return to the date and time display.

STOP




10. Maintenance

Print head

Clean the print head frequently to ensure optimum printing performance. To clean the print head, first unplug the power cord, open the print compartment cover (press the release marked OPEN), and remove the imaging film.

- ◆ Wipe the print head, shaft and roller with a soft cloth dampened with denatured alcohol.

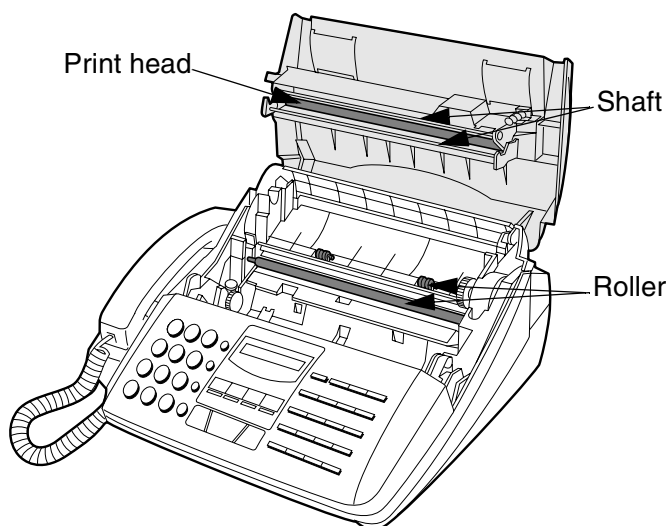


Caution!

- ◆ Do not use benzene or thinner. Avoid touching the print head with hard objects.
- ◆ The print head may be hot if your fax machine has just received a large number of documents. If this is the case, allow the print head to cool prior to cleaning.

Scanning glass and rollers

Clean the scanning glass and rollers frequently to ensure the quality of transmitted images and copies. Open the operation panel by pulling the front edge up (grasp it at the PANEL RELEASE mark), and clean the scanning glass and rollers as shown below.

- ◆ Wipe the scanning glass, white backplate, and rollers with a soft cloth or a cotton pad.
- ◆ Make sure that all dirt and stains (such as correcting fluid) are removed, as these will cause vertical lines on transmitted images and copies.

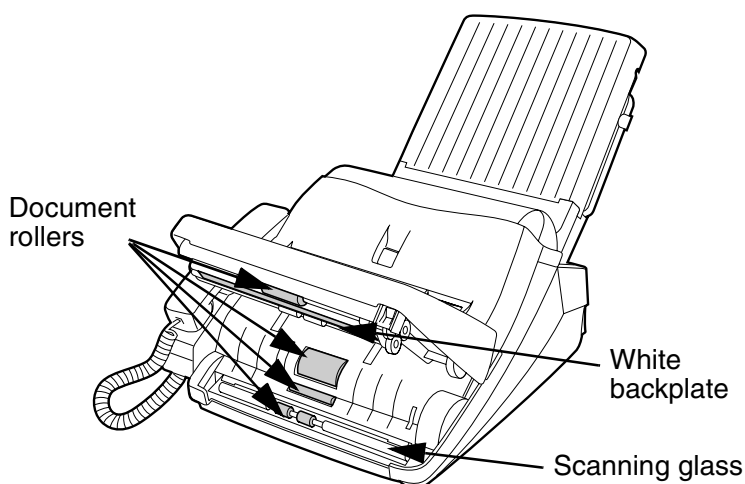

The housing

Wipe the external parts and surface of the machine with a dry cloth.

Caution!

- ◆ Do not use benzene or thinner. These solvents may damage or discolor the machine.

11. Troubleshooting

Problems and Solutions

If you have any problems with your fax, first refer to the following troubleshooting guide.

Line error

Problem	Solution
LINE ERROR appears in the display.	<p>Try the transaction again. If the error persists, check the following:</p> <ul style="list-style-type: none">• Check the connection. The cord from the TEL. LINE jack to the wall jack should be no longer than six feet.• Make sure there are no modem devices sharing the same telephone line.• Check with the other party to make sure their fax machine is functioning properly.• Have your telephone line checked for line noise.• Try connecting the fax machine to a different telephone line.• If the problem still occurs, your fax machine may need service.

Problems and Solutions

Dialing and transmission problems

Problem	Solution
No dial tone when you pick up the handset or press the SPEAKER key.	<ul style="list-style-type: none"> Make sure the handset cord is connected to the correct jack. See <i>Connecting the handset</i> on page 11.
Dialing is not possible.	<ul style="list-style-type: none"> Make sure the power cord is properly plugged into a power outlet. Make sure that the telephone line is properly connected to both the TEL. LINE jack and the wall jack. Make sure that the fax machine is set to the correct dialing mode for your telephone line. See <i>Connecting the telephone line cord</i> on page 13.
The power is on, but no transmission takes place.	<ul style="list-style-type: none"> Make sure that the receiving machine has paper. Make sure that the telephone line cord is plugged into the TEL. LINE jack, and not the TEL. SET jack. If the receiving machine is in manual mode with no attendant, reception will not be possible. Check the display for error messages. Pick up the handset and check for a dial tone.
Nothing is printed at the receiving end.	<ul style="list-style-type: none"> Make sure that the document for transmission is placed face down in the feeder.
A distorted image is received at the other end.	<ul style="list-style-type: none"> Noise on the telephone line may cause distortion. Try sending the document again. Make a copy of the document on your fax machine. If the copy is also distorted, your fax machine may need service.

Problems and Solutions

Reception and copying problems

Problem	Solution
The fax machine doesn't receive documents automatically.	<ul style="list-style-type: none">• Make sure that the reception mode is set to FAX. If you subscribe to a distinctive ring service, make sure that the Distinctive Ring function is set to the correct ring pattern. If you do not subscribe to a distinctive ring service, make sure that Distinctive Ring is set to OFF SETTING. (See <i>Distinctive Ring</i> on page 92.)
The power is on, but no reception takes place.	<ul style="list-style-type: none">• Make sure that the telephone line cord is plugged into the TEL. LINE jack, and not the TEL. SET jack.
The printing paper comes out blank when you try to receive a document.	<ul style="list-style-type: none">• Make sure that the document is loaded properly in the feeder of the transmitting machine. Make a copy or print a report to confirm the printing ability of your machine.
General print quality is poor.	<ul style="list-style-type: none">• It is important to select a paper that is appropriate for the thermal transfer printer in your fax. We recommend using laser quality paper that has a very smooth finish. Copier paper will work, but it sometimes tends to yield a lighter print quality.
The received document is faint.	<ul style="list-style-type: none">• Ask the other party to send higher contrast documents. If the contrast is still too low, your fax machine may need service. Make a copy or print a report to check your machine's printing ability.
Received images are distorted.	<ul style="list-style-type: none">• Noise on the telephone line may cause distortion. Have the other party try sending the document again.• The print head may be dirty. See <i>Print head</i> on page 126.• Make a copy or print a report on your fax machine. If the copy or report is also distorted, your fax machine may need service.

Problems and Solutions

A received document or copy prints out in strips.	<ul style="list-style-type: none"> Make sure the printer compartment cover are completely closed (press down on both sides of each).
The quality of copies is poor and/or black spots appear.	<ul style="list-style-type: none"> Any dirt or material on the scanning glass will cause spots to appear on copies and transmitted faxes. Clean the scanning glass as explained on page 127.
Reception/copying is interrupted.	<ul style="list-style-type: none"> If reception or copying takes place continuously for a long time, the print head may overheat. Turn off the power and let it cool down.

Answering machine connection

Problem	Solution
The answering machine connection does not operate properly.	<ul style="list-style-type: none"> Make sure that the reception mode is set to A.M.. (see page 82). Make sure your fax machine's TEL. LINE jack is connected to the wall jack. Make sure your fax machine's TEL. SET jack is connected to your answering machine's telephone line jack (not the answering machine's extension phone jack). Make sure your answering machine's outgoing message is under 10 seconds. Make sure that the Quiet Detect Time setting is set to three or four seconds (see page 84). Make sure that the Distinctive Ring function is set to OFF SETTING (see page 92). If you have checked all of the above and the hookup still doesn't operate properly, call the Customer Assistance Center.

Problems and Solutions

General problems

Problem	Solution
Information cannot be programmed in the fax.	<ul style="list-style-type: none">• Make sure the fax is plugged in and the imaging film and paper have been loaded. (Programming is not possible if the imaging film and printing paper have not been loaded.) See <i>Loading the Imaging Film</i> and <i>Loading Printing Paper</i> in Chapter 1.
Nothing appears in the display.	<ul style="list-style-type: none">• Make sure the power cord is properly plugged into a power outlet.• Connect another electrical appliance to the outlet to see if it has power.
The machine does not respond when you press any of its keys.	<ul style="list-style-type: none">• If a beep sound is not made when you press the keys, unplug the power cord and then plug it in again several seconds later.
Automatic document feeding does not work for transmission or copying.	<ul style="list-style-type: none">• Check the size and weight of the document (see <i>Transmittable Documents</i> on page 46).
Voice calls taken on an extension phone are interrupted by the fax.	<ul style="list-style-type: none">• The fax may interrupt during a voice call if the reception mode is set to A.M. To prevent interruption on a tone dial extension phone, press any three keys on the extension phone after answering. (Note: Do not enter the code to activate fax reception.)
No reception occurs when polling is attempted.	<ul style="list-style-type: none">• Make sure you have not run out of paper.• Make sure the transmitting machine is set to answer automatically.• If the transmitting machine has polling security, make sure that your fax number has been entered both in your machine and in the transmitting machine.

Messages and Signals

Display messages

Note: If you have turned on the Caller ID function, see Caller ID in Chapter 8 for display messages related to Caller ID.

CHECK PAPER SIZE	The paper size setting is incorrect. Change the paper size setting as explained on page 20.
COVER OPEN	The print compartment cover. Close it.
DOCUMENT JAMMED	The original document is jammed. See the following section, <i>Clearing Paper Jams</i> .
FAX RX IN MEMORY	A fax has been received in memory because the imaging film needs replacement, you have run out of printing paper, or the paper is jammed. After you fix the problem, press the START key to print out the fax.
FILM END	The imaging film may need replacement. Check the film and replace if necessary.
FUNCTION MODE	The FUNCTION key has been pressed.
HOLD	The HOLD/SEARCH key has been pressed to put the other party on hold during a phone conversation. Press the HOLD/SEARCH key again to take the other party off hold, or simply lift the handset if was placed on the cradle after initially pressing the HOLD/SEARCH key.
LCR DOWNLOADING	The fax machine has called OpenLCR and is receiving carrier rate data. This message only appears if you have registered with OpenLCR.
DOWNLOAD ERROR	The fax machine was unable to download rate data from OpenLCR. Try downloading the data manually as explained in <i>Downloading (receiving) the rate data manually</i> on page 35.

Messages and Signals

LINE ERROR	Transmission or reception was not successful. Press the STOP key to clear the message and then try again. If the error persists, see <i>Line Error</i> on page 128.
TAD IN USE	An extension phone connected to the fax is being used. Do not lift the fax's handset or attempt transmission at this time, as this will interrupt the conversation on the extension phone.
MEMORY IS FULL	The memory is full. This may occur during fax reception if too much data is received before the pages can be printed out. If faxes have been received to memory because printing is not possible (an additional message will indicate the problem), resolve the problem so that printing can continue (see <i>Substitute Reception to Memory</i> on page 75). If you are attempting to transmit from memory, see <i>If the memory becomes full</i> on page 105.
MEMORY PRINTING	The fax is preparing to or printing out a document from memory.
NO DATA	This appears if you attempt to search for an automatic dialing number when none have been stored.
NO SERVICE	This appears if you haven't registered with OpenLCR and press the FUNCTION key and 8 .
NO # STORED	You have tried to dial or clear a Rapid Key or Speed Dial number that hasn't been programmed (a full number hasn't been assigned to it).
OFF HOOK	This appears if you forgot to replace the handset after using it to dial and send a fax. Replace the handset or press the STOP key to clear the message.
ON HOOK DIAL	The SPEAKER key has been pressed and the fax machine is waiting for you to dial.
OUT OF PAPER	You are out of printing paper. Load paper as explained in <i>Loading Printing Paper</i> on page 19.

Messages and Signals

OVER HEAT	The print head has overheated. Operation can be continued after it cools.
PAPER JAMMED	The printing paper is jammed. See the following section, <i>Clearing Paper Jams</i> .
READY TO SEND	A document has been loaded and the fax machine is waiting for you to begin faxing or copying.
RECALLING	This appears if you attempt to send a fax by automatic dialing and the line is busy or the receiving fax machine does not answer. Your fax machine will automatically reattempt the call. (See page 64.)
SEARCH DIAL	The HOLD/SEARCH key has been pressed. Press # or * to search for an automatic dialing number, or press the STOP key to return to the date and time display. (See <i>Searching for an auto-dial number</i> on page 63.)
SET PAPER & / PRESS START KEY (alternating messages)	Check the printing paper. If the tray is empty, add paper and then press the START key. If there is paper in the tray, make sure it is inserted correctly and then press the START key.
TOTAL PAGE(S) 01	Number of pages transmitted, received, or copied.

11. Trouble-
shooting

Audible signals

Continuous tone	3 seconds	Indicates the end of transmission, reception, or copying.
Intermittent tone (3 beeps)	5 seconds (1 second on, 1 second off)	Indicates incomplete transmission, reception, or copying.
Rapid intermittent tone	35 seconds (0.7 seconds on, 0.3 seconds off)	Indicates that the handset is off hook.

Clearing Paper Jams


Clearing Paper Jams

Clearing a jammed document

If a document doesn't feed properly during transmission or copying, or DOCUMENT JAMMED appears in the display, first try pressing the **START** key. If the document doesn't feed out, open the operation panel (grasp the front edge at the "PANEL RELEASE" mark and pull up) and pull it out gently.


Clearing jammed printing paper

- 1** Press the release marked OPEN and open the print compartment cover.

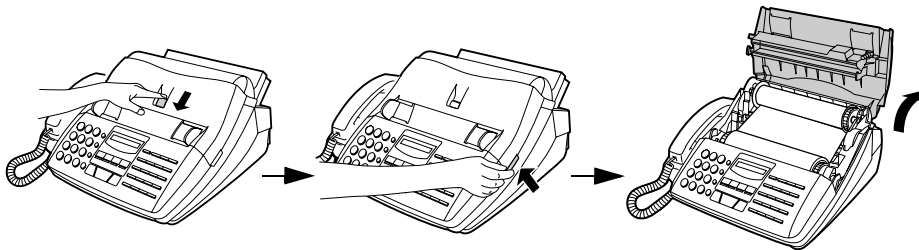


- **Caution!** The printing head (the strip of metal on the underside of the frame) applies heat to the printing film. It may be hot if a document has just been printed.

- 2** Remove the imaging film from the printing compartment and set it on a sheet of paper.

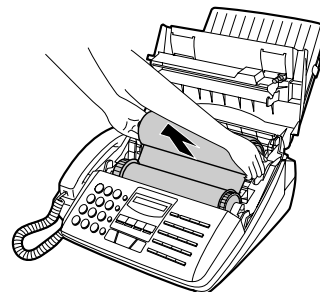


Clearing Paper Jams


- 3** Gently pull the jammed paper out of the printing compartment.

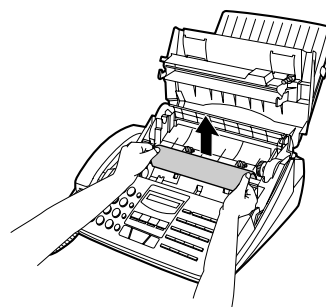


- 4** Replace the imaging film, making sure that the flange goes into the rear slot on the left side of the printing compartment. Also, make sure that the right, rear gear engages with the gear below it.

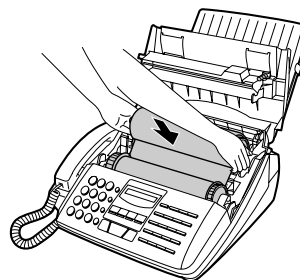

- 5** Wind the film slightly (rotate the gear on the right side of the rear spool) so that there is no slack in the film. Make sure that both edges of the film wind onto the spool evenly.

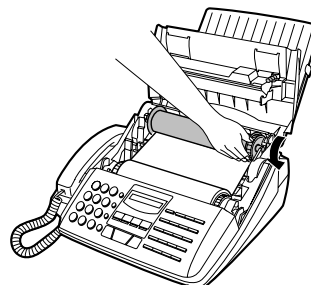

- 6** Close the print compartment cover, making sure it clicks into place.
- Caution! Close the cover slowly to make sure it doesn't pinch your fingers.

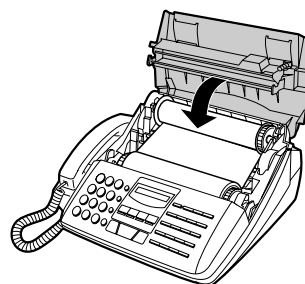

FCC Regulatory Information

FCC Regulatory Information

This equipment complies with FCC rules, Part 68. On this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. If requested, this information must be provided to your telephone company.

An FCC compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is Part 68 compliant. This equipment connects to the telephone network through a standard USOC RJ-11C network interface jack.

The REN is used to determine the quantity of devices which may be connected to your telephone line and still have all of those devices ring when your number is called. Too many devices on one line may result in the devices not ringing in response to an incoming call. In most, but not all, areas the sum of the RENs of all devices should not exceed five (5.0). To be certain of the number of devices that may be connected to your line, as determined by the total REN, contact your local telephone company.

If this equipment causes harm to the telephone network, your telephone company may disconnect your service temporarily. If possible, they will notify you in advance. If advance notice is not practical, you will be notified as soon as possible. You will also be advised of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of your equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If the equipment is causing harm to the telephone network, your telephone company may ask you to disconnect the equipment until the problem is resolved.

If you have any questions or problems which cannot be solved by reading this manual, please contact Sharp's Customer Assistance Center. The number is 1-800-BE SHARP.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. Contact your state's public utility commission, public service commission, or corporation commission for more information.

This equipment is hearing-aid compatible.

When programming and/or making test calls to emergency numbers:

- ◆ Remain on the line and briefly explain to the dispatcher the reason for the call.
- ◆ Perform such activities in the off-peak hours, such as early morning or late evening.

Quick Reference Guide

Entering Your Name and Number

1. Press:

Display shows:

2. Press:

3. Enter your fax number (max. of 20 digits) by pressing the number keys.

- To insert a space between digits, press the # key.
- If you make a mistake, press the **SPEED DIAL** key to backspace and clear the mistake.

4. Press:

5. Enter your name by pressing the appropriate number keys as shown below.

- To enter two letters in succession that require the same key, press the **SPEAKER** key after entering the first letter.

SPACE =	J =	T =
A =	K =	U =
B =	L =	V =
C =	M =	W =
D =	N =	X =
E =	O =	Y =
F =	P =	Z =
G =	Q =	
H =	R =	
I =	S =	

- To change case, press the **REDIAL** key. Press # or * to scroll through symbols and special characters.

6. When finished, press:

Setting the Date and Time

1. Press:

Display shows:

2. Press:

3. Enter two digits for the month (01 to 12).

4. Enter two digits for the day (01 to 31).

5. Enter four digits for the year (Ex: 2000)

6. Enter two digits for the hour (01 to 12) and two digits for the minute (00 to 59).

7. Press * for A.M. or # for P.M.

8. When finished, press:

Storing and Clearing Auto Dial Numbers

1. Press:

Display shows:

2. Press 1 to store a number or 2 to clear a number.

3. Enter a 2-digit number (from "01" to "99") by pressing the number keys. This will be the Speed Dial number. (If you are clearing a number, go to Step 7.)

4. Enter the full fax/telephone number.

5. Press:

6. Enter the name of the location by pressing number keys. (Refer to the letter entry table in *Entering Your Name and Number*.)

7. Press:



Quick Reference Guide

Sending Faxes

Place your document (up to 20 pages) face down in the document feeder.





Normal Dialing

1. Lift the handset or press  **SPEAKER**.
2. Dial the fax number.
3. Wait for the reception tone (if a person answers, ask them to press their Start key).
4. Press: 

Rapid Key Dialing


Press the appropriate Rapid Key (if the Rapid Key is from 19 to 36, press the **SHIFT** key first).
Transmission will begin automatically.

Speed Dialing

1. Press:  **SPEED DIAL**.
2. Enter the 2-digit Speed Dial number.
3. Press: 


Receiving Faxes

Press the **RECEPTION MODE** key until the appears in the display point to the desired reception mode.

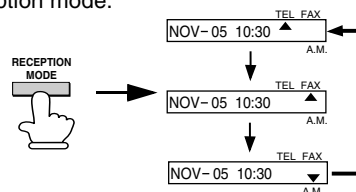

FAX mode: The fax machine automatically answers on four rings and receives the incoming document.


 


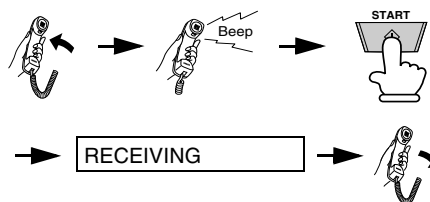TEL mode:



A.M. mode: Select this mode when an answering machine is connected to the fax and the answering machine is turned on.

Guía de referencia rápida

Introducción de su nombre y número

- Pulse:  **3** **#** **#**
El visor muestra: 
- Pulse: 
- Introduzca su número de telefax (20 dígitos como máx.) mediante pulsación de las teclas numéricas.
 - Pulse la tecla **#** para introducir un espacio libre.
 - Si cometiera un error, pulse la tecla **SPEED DIAL** (marcación rápida) para volver un puesto y corregirlo.
- Pulse: 
- Introduzca su nombre mediante pulsación de las teclas numéricas adecuadas como se muestra a continuación.

- Para introducir dos letras sucesivas que requieran el mismo código, pulse la tecla **SPEAKER** (altavoz) después de introducir la primera letra.




SPACE = 1 1	J = 5 5	T = 8 8
A = 2 2	K = 5 5 5	U = 9 8 8
B = 2 2 2	L = 5 5 5 5	V = 8 8 8 8
C = 2 2 2 2	M = 6 6	W = 9 9 9
D = 3 3	N = 6 6 6	X = 9 9 9 9
E = 3 3 3	O = 6 6 6 6	Y = 9 9 9 9 9
F = 3 3 3 3	P = 7 7	Z = 9 9 9 9 9 9
G = 4 4	Q = 7 7 7	
H = 4 4 4	R = 7 7 7 7	
I = 4 4 4 4	S = 7 7 7 7 7	

- Para cambiar de mayúscula a minúscula y viceversa, pulse la tecla **REDIAL** (repetición de llamada). Pulse la tecla **#** o ***** para hojear por los símbolos y caracteres especiales.

 - Una vez finalizado pulse:








Ajuste de la fecha y hora

 - Pulse:  **3** ***** ***** ***** *****
El visor muestra: 
- Pulse: 
- Introduzca dos dígitos para el mes (01 hasta 12).
- Introduzca dos dígitos para el día (01 hasta 31).
- Introduzca cuatro dígitos para el año (Ej.: 2000).
- Introduzca dos dígitos para la hora (01 hasta 12) y dos dígitos para los minutos (00 hasta 59).
- Pulse ***** para A.M. o **#** para P.M.
- Una vez finalizado pulse




Memorización y borrado de números de marcación automática

- Pulse:  **3** **#**
El visor muestra: 
- Pulse **1** para guardar un número ó **2** para borrarlo.
- Introduzca un número de marcación abreviada de dos dígitos (desde 01 hasta 04 para marcación rápida o desde 05 hasta 44 para marcación abreviada). (Vaya al paso 7 si está borrando un número)
- Introduzca el número de telefax/teléfono completo.
- Pulse: 
- Introduzca el número del puesto mediante pulsación de las teclas numéricas. (Consulte la tabla para introducción de letras en la *Introducción de su nombre y número*).
- Pulse:  

Guía de referencia rápida


Transmisión de mensajes telefax Recepción de mensajes telefax

Coloque el original (hasta 20 páginas) cara abajo en el alimentador de documentos.

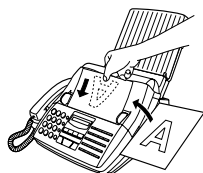

Marcación normal



1. Levante el auricular o pulse **SPEAKER**.
2. Marque el número de telefax.
3. Espere hasta escuchar el tono de recepción (si contestara una persona, pídale pulsar su tecla Start).

4. Pulse: 


Marcación rápida

Pulse la tecla de marcación rápida adecuada. La transmisión se inicia automáticamente.

Marcación abreviada


1. Pulse: 
2. Introduzca el número de dos dígitos de marcación abreviada.
3. Pulse: 

Pulse la tecla **RESOLUTION/RECEPTION MODE** (Resolución/Modo de recepción) hasta que la flecha en el visor señale el modo de recepción deseado (asegúrese de que el alimentador de originales está vacío).

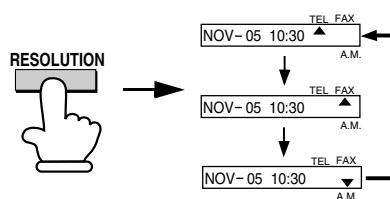

Modo FAX: El aparato telefax contesta automáticamente tras cuatro llamadas del timbre y recibe el documento entrante.

Modo TEL:

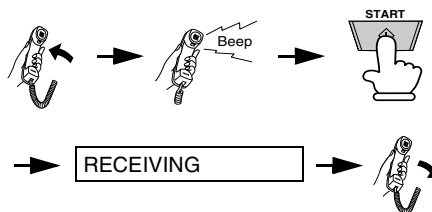

Modo A.M.: Cuando salga, seleccione este modo para recibir mensajes hablados en su contestador automático y mensajes telefax en su aparato telefax.

S H A R P

Date Revised: _____

Date Issued :Dec. 22, 1998

MATERIAL SAFETY DATA SHEET (1/2)

MSDS No. B-1006

Section 1. Product Identification

Product Code : UX-15CR Imaging Film

Section 2. Supplier's Name and Address

Sharp Corporation

22-22 Nagaike-cho, Abeno-ku, Osaka, Japan

Local suppliers are listed below. Please contact the nearest supplier for additional information.

(Country)	(Name and Telephone Number)
U.S.A.	Sharp Document Network System of America Telephone number for information: 1-800-237-4277 Emergency telephone number : 1-800-255-3924
Canada	Sharp Electronics of Canada Ltd. Telephone number for information: 905-890-2100 Emergency telephone number : 1-800-424-9300
United Kingdom	Sharp Electronics (U.K.) Ltd. Telephone number for information: 01923-474013

Section 3. Ingredients

Ingredients	CAS No.	Proportion	OSHA PEL	ACGIH TLV	Other Limits
Polyethylene terephthalate	25038-59-9	51.0%	-	-	-
Carbon Black	1333-86-4	8.5%	3.5 mg/m ³	3.5 mg/m ³	-
Ethylene-vinyl acetate copolymer	24937-78-8	3.1%	-	-	-
Ester wax	8015-86-9	5.6%	-	-	-
Paraffin Wax	8002-74-2	12.5%	-	2 mg/m ³ (fume)	-
Microcrystalline wax	63231-60-7	15.2%	-	-	-
Modified wax	8016-60-2	1.3%	-	-	-
Polyester resin	27923-68-8	1.3%	-	-	-
Others	-	1.5%	-	-	-

Section 4. Hazardous Identification (Emergency Overview)

This product is ink film for thermal transfer facsimile. "Ink film" is a thin film coated with ink.

It is no special hazard under normal use condition.

Section 5. Health Hazard Data

Route(s) of Entry :

Inhalation?

Not applicable

Skin?

Not applicable

Ingestion?

Possible but very unusual

Health Hazards : The ingredients are not listed in ACGIH(1986) and OSHA(1989) except carbon black and paraffin wax.

Carcinogenicity : In 1996 the IARC reevaluated carbon black as a Group 2B carcinogen (possible human carcinogen). This classification is given to chemicals for which there is inadequate human evidence, but sufficient animal evidence on which to base an opinion of carcinogenicity. The classification is based upon the development of lung tumors in rats receiving chronic inhalation exposures to free carbon black at levels that induce particle overload of the lung. Studies performed in animal models other than rats did not show any association between carbon black and lung tumors.

Signs and Symptoms of Exposure : not applicable**Medical Conditions Generally Aggravated by Exposure** : not applicable**Emergency and First Aid Procedures** : not applicable

S H A R P

Date Revised:

Date Issued : Dec. 22, 1998

MATERIAL SAFETY DATA SHEET (2/2)

MSDS No. B-1006

Section 6. Physical Chemical Characteristics

Boiling/Melting Point	m.p. about 70°C for ink	Specific Gravity	about 1
Vapor Pressure	Not applicable	Solubility in Water	Negligible
Vapor Density	Not applicable	PH	Not applicable
Evaporation Rate	Negligible	Viscosity	Not applicable
Appearance	Thin film coated with ink	Color	Black
Odor	Slight wax odor		

Section 7. Fire and Explosion Data

Flash Point (Method Used)	: about 250°C for ink
Ignition Temperature	: Not applicable
Flammable Limits	: (LEL): Not applicable(UEL): Not applicable
Extinguishing Media	: CO ₂ , water, dry chemicals and foam etc.
Special Fire Fighting Procedure	: None
Unusual Fire and Explosion Hazard	: None
Sensitivity to Mechanical Impact	: No hazardous effect by mechanical impact
Sensitivity to Static Charge	: Not applicable

Section 8. Reactivity Data

Stability	: Stable
Incompatibility (Material to Avoid)	: None
Hazardous Decomposition	: Not applicable
Hazardous Polymerization	: Not applicable

Section 9. Precautions for Safe Handling and Use

Personal Protection Information (Respiratory, Eye Protection and Protective Glove)	: Not required
Engineering Control / Ventilation	: Not required
Work / Hygienic Practice	: None
Steps to be taken in case of Spill or Leak	: If rumple the product and wax layer peel off, sweep up or clean with vacuum cleaner.
Waste Disposal Method	: If it dirty skin, wash with water and soap. If it clothes, wash by suitable method. Dispose in an approved incinerator or contract with licensed chemical disposal agency. Ensure conformity with governmental disposal regulations. (Dispose by the same method of ordinary plastic products.)

Section 10. Regulatory Information

NFPA Rating (U.S.A.)	: No information
WHMIS Legislation (Canada)	: Not controlled
Transport Information	: No information
UN No.	: No information

Section 11. Other Information

References : IARC(1996), IARC Monographs on the Evaluation of the Carcinogenic Risk of Chemicals to Humans, Vol. 65, Printing Process and Printing Inks, Carbon Black and Some Nitro Compounds, Lyon, pp-149-261
 H. Muhle, B. Bellmann, O. Creutzenberg, C. Dasenbrock, H. Ernst, R. Kilpper, J. C. Mackenzie, P. Morrow, U. Mohr, S. Takenaka, and R. Mermelstein (1991) Pulmonary Response to Toner upon Chronic Inhalation Exposure in Rats. Fundamental and Applied Toxicology 17, pp. 280-299

Index

A

A.M. reception mode, 28, 82
Activity Report, 119
 Auto print-out, 121
Answering machine hookup
 Activating, 82
 Connecting, 81
 Fax reception when TAD fails, 85
 Quiet Detect Time, 84
 Troubleshooting, 131
Anti Junk Fax, 101 - 102
Anti Junk Number List, 123
Audible signals, 135
Auto-dial numbers, storing, 56

B

Batch page numbering, 99

C

Caller ID, 86 - 91
Caller ID List, 124
Contrast, 50
Copies, 76 - 77
Copy cut-off setting, 78
Cover sheet, 96 - 98

D

Date, setting, 25
Daylight Saving Time, 27
Dial mode, 13
Dialing
 Direct Keypad, 62
 Normal, 53, 79
 Rapid Key, 60, 79
 Speed, 61, 79
Direct Keypad Dialing, 62
Display messages, 133
Distinctive ring, 92

Document feeder, 48
Document guides, 48
Document restrictions, 47
Document sizes, 46
Document, maximum scanning size, 47

E

ECM (Error Correction Mode), 66
Extension telephone
 Connecting, 14
 Using, 70

F

FAX reception mode, 28, 67
Fax Signal Receive, 73
Fine resolution priority, 52

H

Halftone setting, 50
Handset, 11
Handset receiver volume, 30
Hold, 80
Housing, cleaning, 127

I

Imaging film, loading and replacing, 15 - 18
Initialize film setting, 18

J

Jams, clearing, 136 - 137

L

Letters, entering, 24
Line error, 128
Loading printing paper, 19 - 21
Loading the document, 48

Index

M

Memory

- Sending documents from, 103
- Substitute reception to, 75

N

- Normal Dialing, 53, 79
- Number of rings in FAX reception mode, 68

O

- OpenLCR, 31 - 45
- Option Setting List, 123

P

- Paper jams, clearing, 136 - 137
- Paper size setting, 20
- Paper, loading, 19 - 21
- Passcode List, 122
- Pauses in automatic dialing, 56
- Polling, 106 - 109
- Power cord, 12
- Print contrast setting, 21
- Print head, cleaning, 126
- Print Setup List, 124
- Priority Call, 90
- Programs, 113 - 118

R

- Rapid Key Dialing, 60, 79
- Recall interval, 64
- Recall times, 65

Reception mode

- A.M. mode, 28, 82
- FAX mode, 28, 67
- Setting, 28
- TEL mode, 28, 69

- Reception Ratio setting, 74
- Redialing, 54, 64, 80
- Remote reception setting, 72
- Removing original document, 49
- Resolution, 50
- Ringer volume, 30

S

- Scanning glass, cleaning, 127
- Search Dial, 63, 80
- Sender's name and number, entering, 22 - 24
- Speaker volume, 29
- Speed Dialing, 61, 79

 
 
T

- TEL reception mode, 28, 69
- TEL. LINE jack, 13
- TEL. SET jack, 14, 81
- Tel/Fax Remote Number, 71, 72
- Telephone line cord, 13
- Telephone Number List, 122
- Time, setting, 25
- Timer List, 121
- Timer operations, 110 - 112
- Transaction Report, 125
 - Setting print-out condition, 125
- Two-in-one printing, 73



NOTICE

BE SURE TO ASK YOUR AUTHORIZED SHARP DEALER ABOUT THE WARRANTY THAT YOUR SELLING DEALER EXTENDS TO YOU. In order to assure you, the end-user, of warranty protection, Sharp extends a limited warranty to each of its authorized dealers and, in turn, requires each of its authorized dealers to extend its own warranty to you on terms that are no less favorable than those given to the dealer by Sharp. You should be aware, however, that Sharp does not itself extend any warranties, either express or implied, directly to you, the end-user, and no one is authorized to make any representations or warranties on behalf of Sharp. Specifically, SHARP DOES NOT EXTEND TO YOU, THE END-USER, ANY EXPRESS WARRANTY OR ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR USE OR FITNESS FOR ANY PARTICULAR PURPOSE IN CONNECTION WITH THE HARDWARE, SOFTWARE OR FIRMWARE EMBODIED IN, OR USED IN CONJUNCTION WITH THIS PRODUCT. Sharp is not responsible for any damages or loss, either direct, incidental or consequential, which you, the end-user, may experience as a result of your purchase or use of the hardware, software or firmware embodied in or used in conjunction with this Product. Your sole remedy, in the event that you encounter any difficulties with the Product, is against the authorized dealer from which you purchased the Product. In the event that this authorized dealer does not honor its warranty commitments, please contact the Vice President, Sharp Document Network System of America, Business Product Group, Sharp Plaza, Mahwah, NJ 07430-2135, so that Sharp can try to help assure complete satisfaction of all the warranty rights to which you are entitled from the authorized dealer.



SHARP®
SHARP DOCUMENT NETWORK SYSTEM OF
AMERICA

Sharp Plaza, Mahwah, New Jersey 07430-2135

SHARP CORPORATION

PRINTED IN THAILAND
(TINSE4162XHTZ)